

**WARNING:**

Propane gas is highly flammable and under pressure in the cylinder. Do Not store or use gasoline or other flammable liquids or vapors in the vicinity of this stove. If you detect the odor of gas, immediately evacuate the enclosed area and contact the appropriate authorities/professionals.



**SET UP/ OPERATING/ STORAGE INSTRUCTIONS**

**PREPARING THE HEATER**

1. Be sure the gas valve is in the off position.
2. Carefully attach heater to a 16.4 disposable propane cylinder.
3. Place the propane cylinder into the plastic lantern base.

**OPERATING THE HEATER**

1. Attach the heater to full disposable propane cylinder.
  2. Make sure the heater is placed in the cylinder support ring with the safety legs extended.
  3. Open the temperature / fuel valve.
  4. Hold the heater a little far away from your face, like picture A. Don't hold the heater like picture B because the igniting flame may burn your face and hair.
  5. Gradually press the red igniter button (do not act too fast) until you hear the "click" of the automatic spark igniter.
  6. If the heater fails to light on the first click, click the igniter again until the burner lights.
  7. Continue to hold the red button down for about 30 seconds after the burner has ignited (this will allow the thermocouple time to heat sufficiently).
  8. 30 seconds after the burner has ignited, you may release the red igniter button and adjust the heater to your desired output.
  9. Once the heater is lit, do not touch the metal reflector or safety grid, as they become very hot.
  10. Keep away from children, pets, and flammable materials.
  11. Allow heater to cool for 15 minutes before disassembly and storage.
  12. **PLEASE NOTE:** Cup holder adapter is designed to be used in approve cup holders only.
- NEVER** operate the heater on a flat surface without the ring base and extended feet for stability.
- Caution:** The heat deflector and safety grate can become very hot during usage. Do not place near any combustible surface during use.
- Allow 15 minutes to cool before removing the disposable propane cylinder and heater storage.

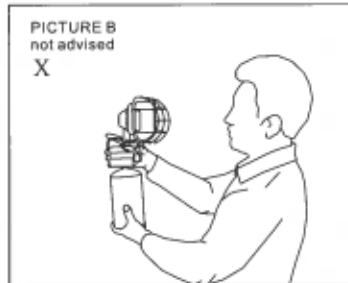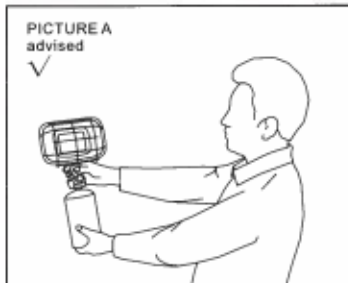

**CLEANING YOUR HEATER**

1. You may want to gently wipe the heater element and heat reflector with a clean cloth before usage and storage.
2. DO NOT IMMERSE YOUR HEATER IN WATER FOR CLEANING.

**STORING YOUR HEATER**


1. Do not leave the propane cylinder attached to the heater.
2. Allow to cool and then remove the propane cylinder.  
Place in a protective box or bag to keep it clean until its next use.

**⚠ DANGER**

**EXPLOSION - FIRE HAZARD**

- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120 degrees F (49°C).
- The cylinder must be disconnected when the heater is in storage.

**Heater Set Screw Adjustment**

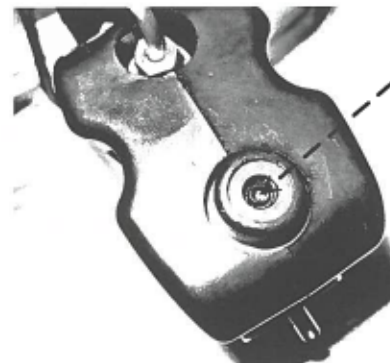

**Altitude/Flow Adjustment Set Screw**

Due to altitude and temperature some adjustment may be necessary for the heater to Function correctly. In the event the heater lights and goes out with movement, adjust the set screw in increments of 1/8 clockwise turns.

Caution: do not over turn set screw as unit can over heat! Only adjust to a point of a good flow rate that allows the unit to stay lit under golf car moment or walking.

**MAINTENANCE SCHEDULE & REPLACEMENT PARTS**

1. Clean the heater after each use and before storage.
2. No other parts on the heater are serviceable in the field.