

SP004/5 Replacement O.E.M. for EZGO TXT Non-DCS/PDS Models




BUGGIES
UNLIMITED

This diagram shows the cable connections for a three pole controller.

If your controller has four poles, use this same diagram except remove A2 cable from controller to forward/reverse C terminal.

- 27" Cable Battery Positive Post To Solenoid #1 post
- 6" Cable B+ Controller To Solenoid #2 post
- 22.5" Cable B+ Controller To F/R A terminal
- 36" Cable Battery Negative Post To B- on Controller
- 54" Cable M- Controller To A1 on the motor
- 43" Cable A2 To F/R C terminal (Motor A2)
- 44.5" Cable S1 To F/R D terminal (Motor S1)
- 40.5" Cable S2 To F/R B terminal (Motor S2)
- 7" Battery connection cables (4)
- 11" Battery connection cable (1)

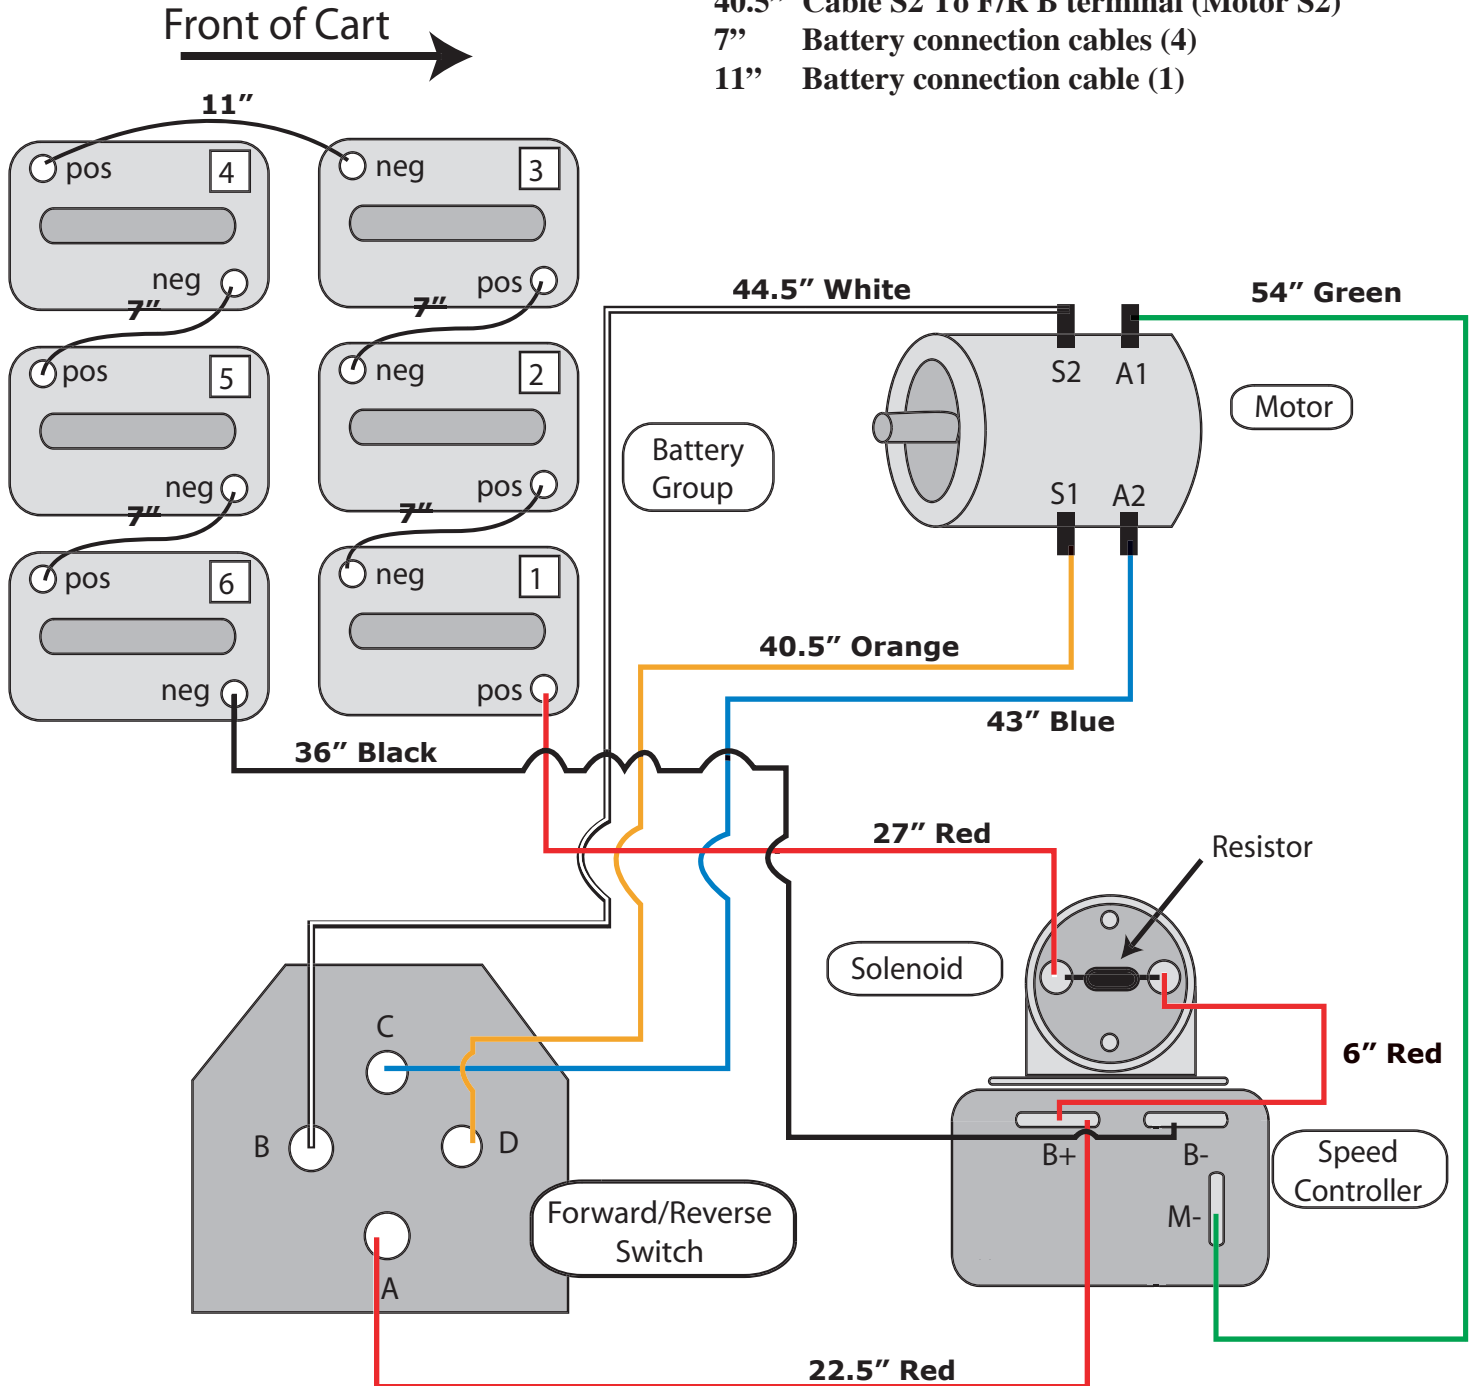

Buggies Unlimited
888-444-9994
buggiesunlimited.com