6700 Bushing Install

Remove old sleeve and then bushings with blunt driving tool. Screwdrivers or sharp edged tools can distort the metal housing.



To install the new bushings clean the bore and clean off any burrs that may exist.

Install the bushings first. Lubricate bore and bushing with some sort of STP product, that is really slick. Place the bushings on each side. Install a 5/16" all thread rod through the bushings. Place a washer the O.D. size of bushing on each end. Install a 5/16" nut and tighten bushings into place. Make sure they start straight. Re-align the bolt if pulling to one side.



Next install the sleeve. Again lubricate the sleeve and bushing. Install a 5/16" rod (all thread) into the sleeve with washers on either end. Tighten the nuts until the sleeve fully draws into the bushings. Then remove the rod and tap sleeve with a hammer to center it.



Caution: Wear Appropriate Eye Protection!

