


STL JL CC Steering Stops

Installation Instructions for Club Car Models

Please remember to wear appropriate eye protection

Parts List:

- A) Driver Side Steering Stop
- B) Passenger Side Steering Stop
- C) 1" x 1/4" Bolts (4x)
- D) 1" x 1/4" Lock Nuts (4 x)

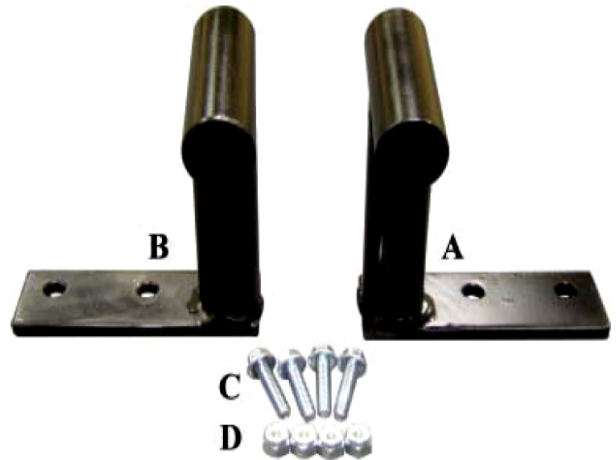

Instructions for Cars

- A) Raise vehicle and support with jack stands.
- B) Remove both front wheels.
- C) Use provided template (page 2) to cut out steering stop locations.
- D) Place the driver's side template on the outside of the driver's side I-beam.
- E) Tape template in place.
- F) Hold the driver's side steering stop in position by aligning it with the notched end of the paper template.
- G) While holding the steering stop in place, mark where the two mounting holes need to be drilled into the I-beam. Note: alignment can vary from car to car and care must be taken at this time to manually place the stop in place and turn the steering to make sure the hole placement will be correct. Then mark your holes accordingly.
- H) Remove the template and steering stop.
- I) Using a 1/4" drill bit, drill holes through I-beam where marked.
- J) Install steering stop with supplied 1" x 1/4" bolts/nuts and tighten to 6-9 foot pounds.
- K) While applying torque to bolts, hold steering stop in the correct position.
- L) Repeat this procedure on the passenger side of the car.

