

PART 461 & 462

INSTRUCTIONS FOR INSTALLING A CURTIS FUEL GAUGE (STATE OF CHARGE)

#906T, 36-VOLT, NIVEL #461 OR

#906T, 48-VOLT, NIVEL #462

ON BACK OF GAUGE

TERMINAL #1 - Is for the POSITIVE lead from a 36-volt battery source

TERMINAL #2 - Is for the NEGATIVE lead from a 36-volt battery source

TERMINAL #4 - Is for the key switch. Run a wire lead from the POSITIVE of the key switch

ALL WIRE LEAD SHOUD BE 14 GAUGE