



Club Car Precednt Nerf Bars Installation Instructions Black- Part# 7438

Parts List

Driver Side Nerf Bar-1
Passenger Side Nerf Bar-1
Diamond Plate Step-2
Front Mounting Brackets-2
Hardware Kit-1



Always wear appropriate
eye protection!

NOTE: Driver and passenger side nerf bar are different, the top picture shows the nerf bars as you would see them looking at the passenger side of the cart. The longer mounting plate goes to the rear of each side.

1. Using the supplied $3/8 \times 2 \frac{1}{2}$ bolt, flat washer, & locknut bolt the passenger side nerf bar to the car using the stock hole in the frame as shown in FIGURE 1. **NOTE: If your car does not have the stock hole on the bottom portion of the side of the frame you will need to mark and drill through the frame to mount.**
2. There is a hole in the bottom of the rear mount. Using the supplied self tapping screw attach the bottom of the mount to the frame as shown in FIGURE 1.
3. Using the supplied self tapping screw mount the front portion of the nerf bar to the frame of the cart as shown in FIGURE 2. **NOTE: Before drilling make sure to hold the nerf bar to the frame and make a mark on the frame to where the bar is running parallel to the car. Once mark is made on the frame hold the nerf bar up to the frame, locate the mark and install self tapping screw.**
4. Remove the stock bottom roof mount bolt from the passenger side of the car. On some models you will need to slide the plastic cover up the roof support to locate the bolt.
5. Using the supplied metric 8.8m-1.25x80 bolt and supplied m8-1.25 nut loosely mount the top of the front support bracket to the car.
6. Using the supplied $5/16 \times 1$ bolt, flat washer and locknut bolt the front support bracket to the tab on the nerf bar as shown in FIGURE 3. Securely tighten all bolts.
7. This nerf bar kit comes with an optional diamond plate step. If you want to install the diamond plate step place it on top of the nerf bar in the desired location. Using a marker or punch mark the three holes on the nerf bar. Using a $3/16$ drill bit drill through the three marked holes in the nerf bar. **NOTE: Make sure you only drill through the top section of the nerf bar. You do not drill through the entire nerf bar.**
8. Using the supplied rivets mount the diamond plate step to the nerf bar using the 3 holes you just drilled.
9. Repeat steps 1-8 for the driver side of the car.

Figure 1


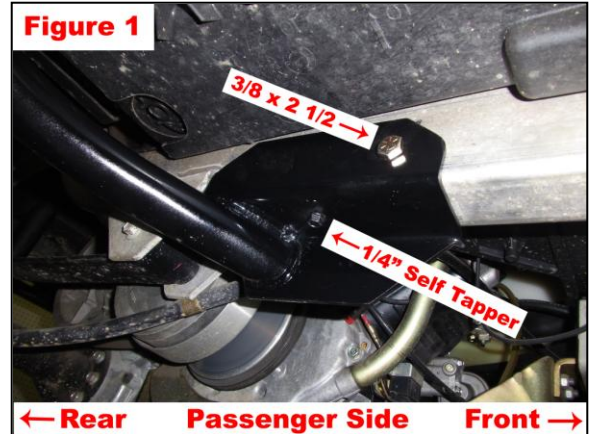


Figure 2



Picture of front passenger side mount

Figure 3

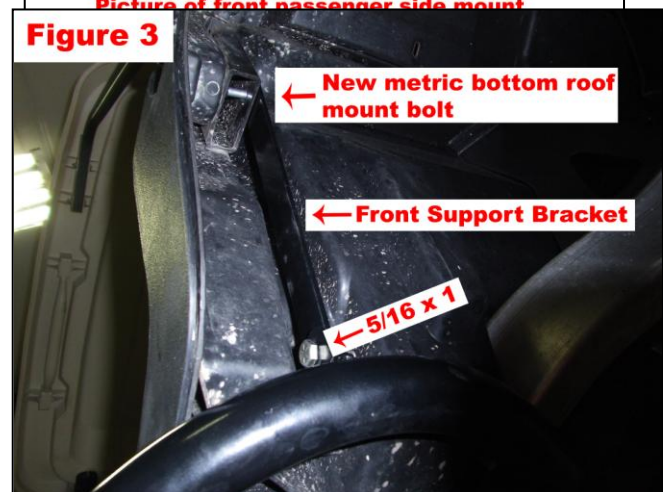

866-405-2537

www.jakesliftkits.com