

**CARGO BOX**  
**WILL FIT E-Z-GO® TXT™**  
**INSTALLATION INSTRUCTIONS**


**INCLUDED:**  
**2 MAIN BRACKETS**  
**2 BAGWELL BRACKETS**  
**2 HARDWARE PACKS**



3  
 Set the rear struts on the frame. There should be nothing attached to the rear of the golf cart as shown in the picture.


4  
 Attach main bracket to each side of the golf cart using hardware from pack 1.

ATTACH  
 HARDWARE

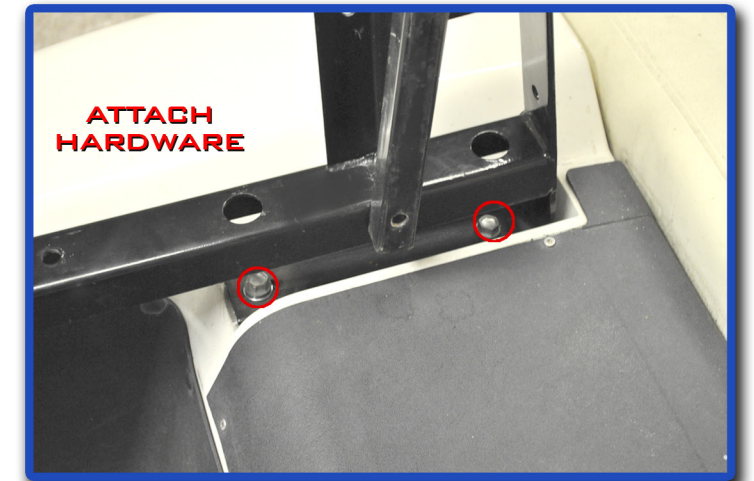

1  
 Take off factory brackets and basket from golf cart by removing hardware from each side. Retain hardware. You will need it later.

REMOVE  
 HARDWARE

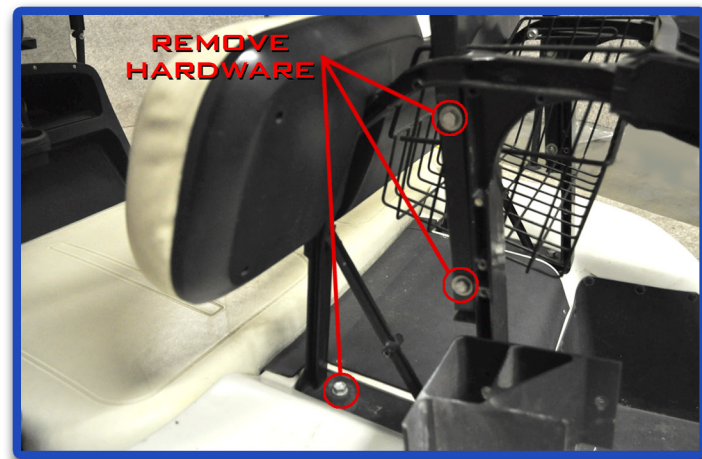


ATTACH  
 HARDWARE



5  
 Attach bagwell brackets to the floor of the bagwell using hardware from pack 2. Attach bagwell bracket to main bracket using hardware from pack 2.

REMOVE  
 HARDWARE

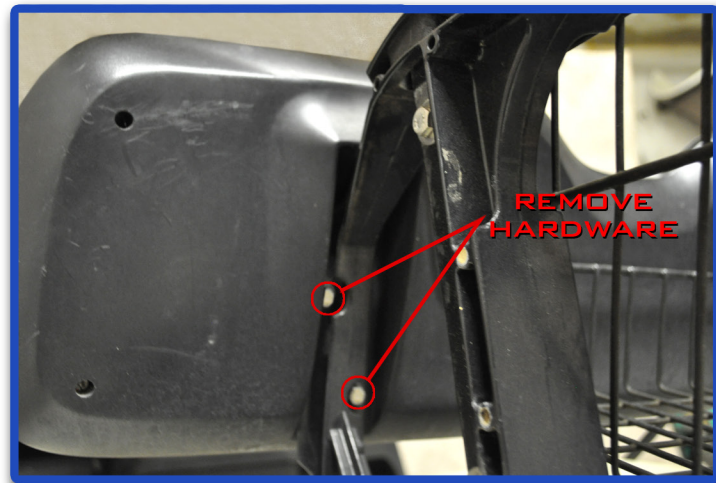

2  
 Take the seat back off the cart by removing the two back screws located on each side. Retain hardware. You will need it later.

6  
 Attach rear struts to main bracket on each side using retained hardware from step 1.

ATTACH  
 HARDWARE





## CARGO BOX HARDWARE PACKS

### HARDWARE PACK 1

BAGWELL BRACKET TO FLOOR OF BAGWELL

(4) 3/8" SHOULDER HEX BOLTS

### HARDWARE PACK 3

BAGWELL BRACKETS AT TOP AND BOTTOM

(4) 10MM X 40MM SHOULDER HEX BOLTS

(8) 10MM X 25MM X 2MM WASHERS

(4) 10MM ANTI-SLIP NUTS



### HARDWARE PACK 3

CARGO BOX

(4) 10MM X 25MM SHOULDER HEX BOLTS

(8) 10MM X 25MM X 2MM WASHERS

(4) 10MM ANTI-SLIP NUTS

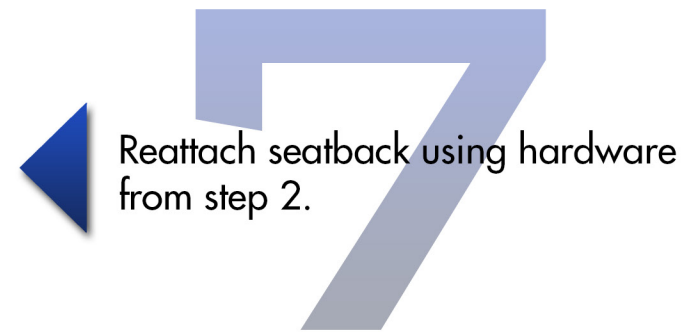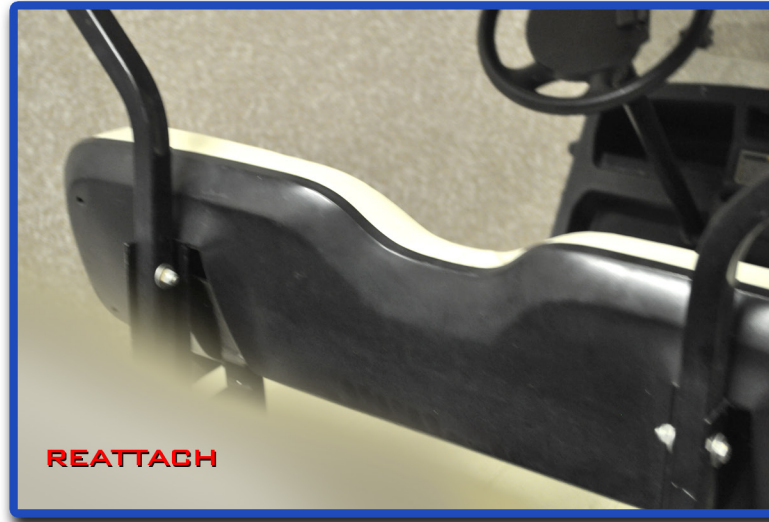

Place the cargo box on the main brackets and align holes. Using remaining hardware from pack 2, insert all bolts into box and then tighten.

