

**E-Z-GO Front Bumper  
Installation Instructions**  
Black- Part# 7095  
Gunmetal- Part# 7096  
Stainless- Part# 6286



**\*\*NOTE-This front bumper only fits E-Z-GO models lifted with Jake's Long Travel Lift Kit\*\***

*Parts List*

*Front Bumper-1*


*1/4 x 1 3/4 Bolts-2*

*1/4 Locknuts-2*



*Always wear appropriate  
eye protection!*

1. Using the supplied bolts and locknuts, mount the new bumper to the long travel lift kit main frame as shown.
2. Securely tighten all bolts.

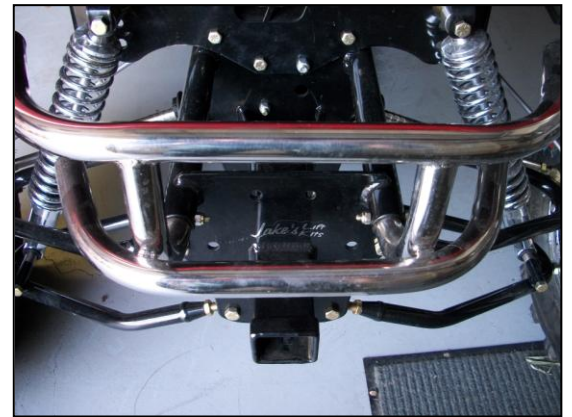

866-405-2537

[www.jakesliftkits.com](http://www.jakesliftkits.com)