




**Wear the appropriate eye protection!**

**SCB CC5 BSKT  
CLAY SPORTING  
BASKET  
CLUB CAR DS MODEL**

The hardware kit consists of:

- 4 1.5" Spacers
- 4 5/16" X 2 1/4" USS Flange Bolts
- 2 5/16 X 1" USS Flange Bolts
- 4 5/16" X 1 1/4" USS Flange Bolts
- 6 5/16" USS Nyloc USS Nuts

- Remove the windshield frame bolts and on older cars the windshield brace to dash bolts.
- Slide the LH and RH basket brackets into place.
- Install the new bolts and nuts but only hand tighten at this point.
- Set the basket in place.
- Place the 1.5" spacers between the basket bracket and car mounting bracket.
- Once all spacers, bolts, and nuts are in place completely tighten them.

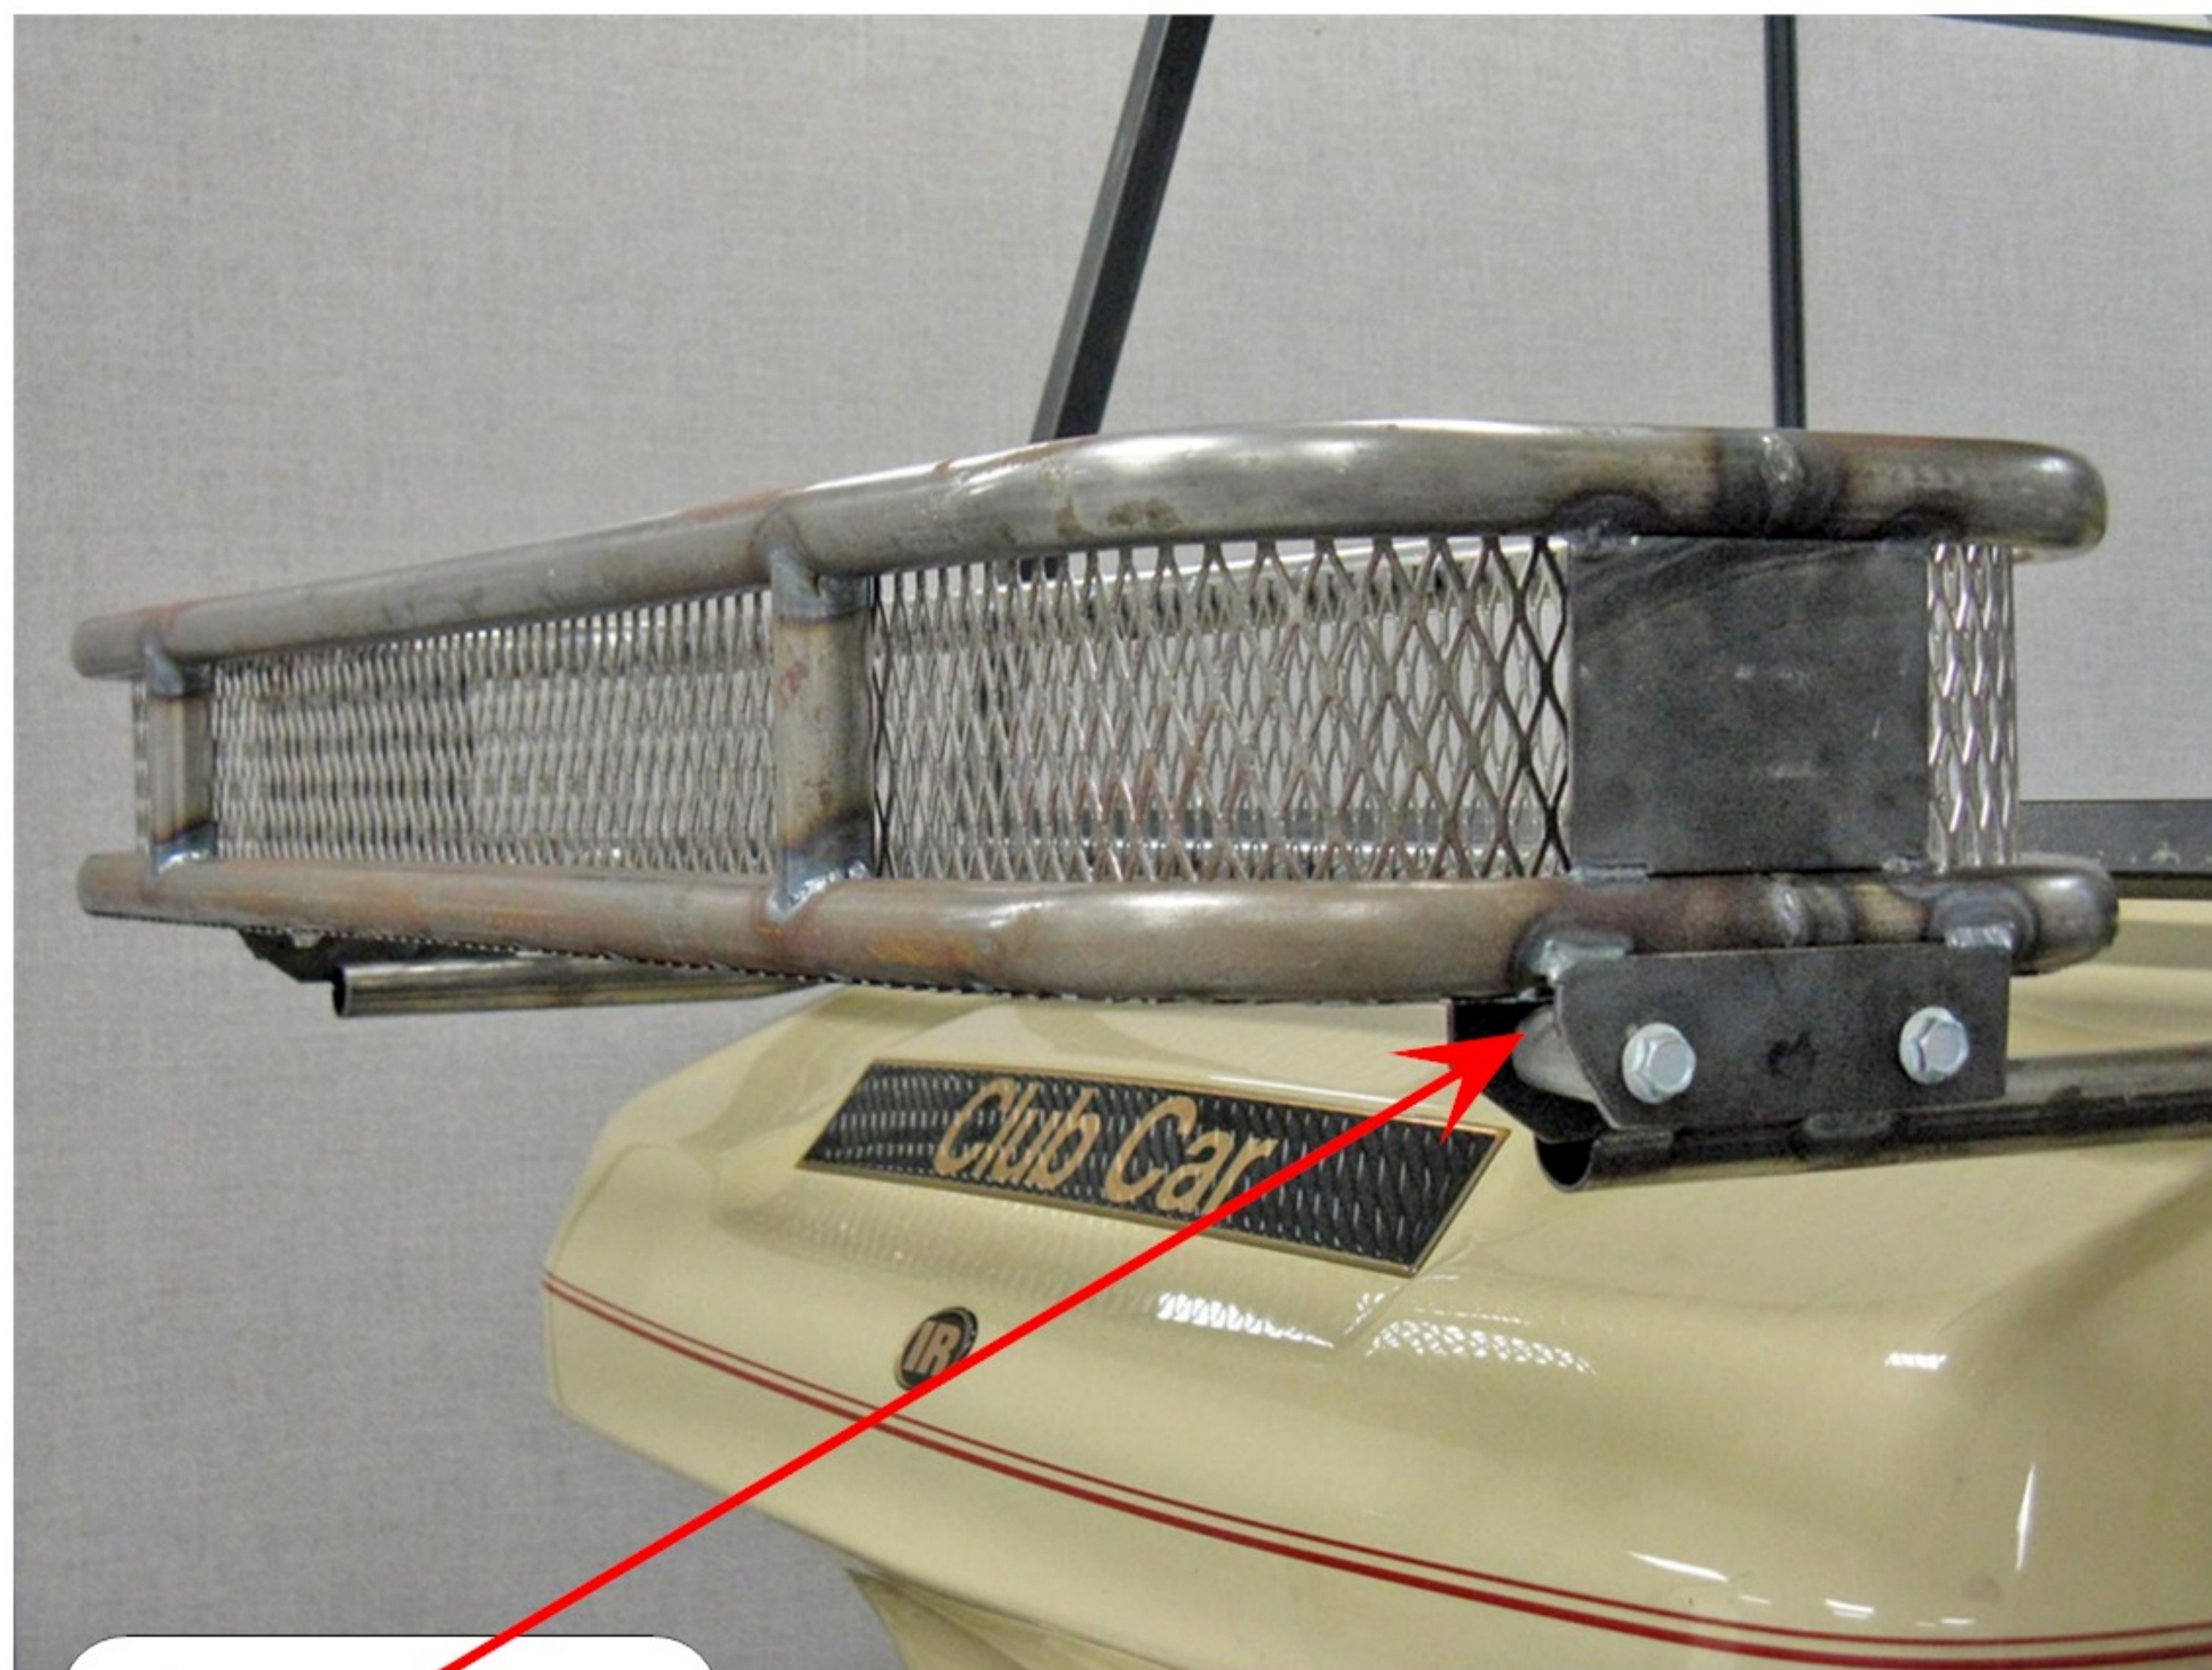

- Spacers
- Frame Bolts
- Dash brace bolts

