



**CHG UNV 3541
48 Volt Timer
Conversion**

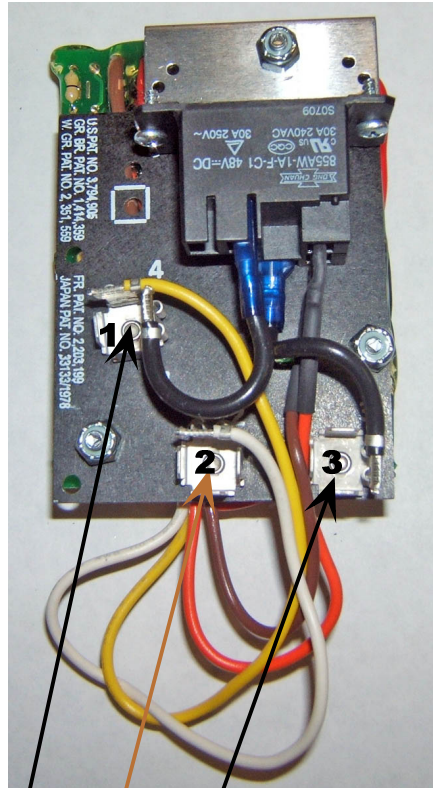

On the car cut the main black negative charger receptacle wire and move to B- on the controller or battery number 6 negative as per bottom diagram.

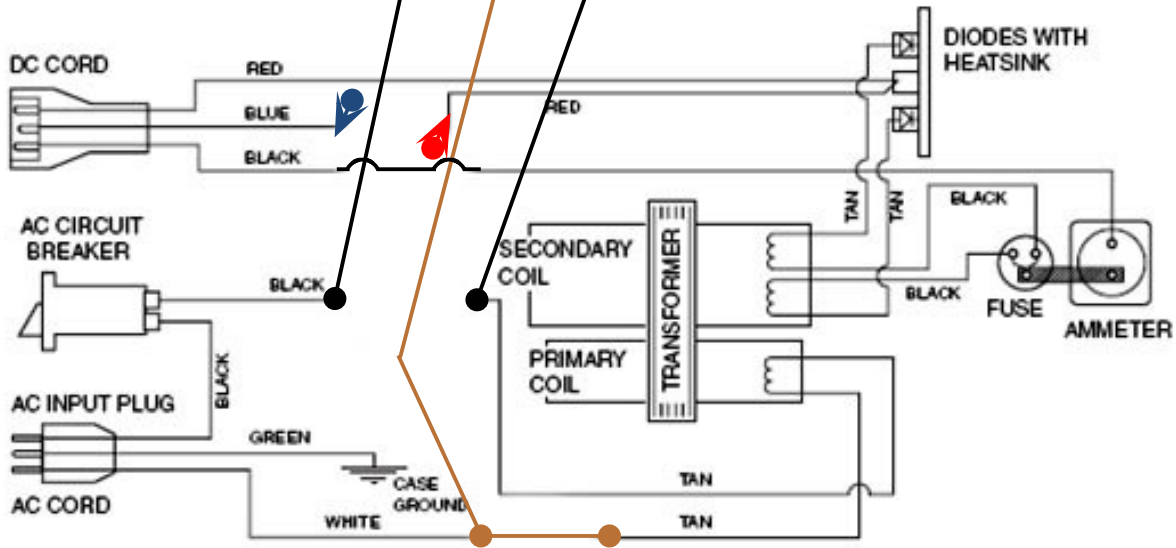

Charger:
Remove the existing relay. Tape the Blue signal wire. Tape the red signal wire. Route the Black circuit breaker wire to pin 1 on the new timer. Route the Black/Tan wire to pin 3 on the timer. Route the White/Tan wire to pin 2 on the timer.

Older csr connection at B-

