

**CGB CC3 ALUM-Aluminum Box
CGB CC3 BLK-Black Steel Box
Installation Instructions For 2004 & Up Club Car Precedent Cargo Boxes**





CAUTION: DO NOT TRANSPORT PASSENGERS IN CARGO BOX.

Kit Components:

Item # Description

- 1 Cargo Box
- 2 Left & Right Hand Mounting Brackets
- 3 Tailgate Rubber Latches
- 4 Tailgate Rubber Bumpers
- 5 Tailgate Hardware Kit
- 6 Hardware Kits

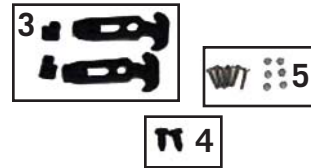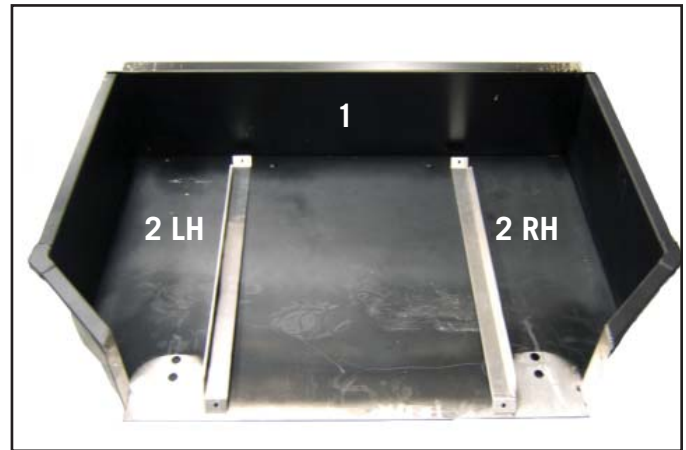

Hardware Kits (Item 6) Contain:

Bottom Channel Hardware Kit

- (2) 5/16"-18 x 1" Carriage Bolts
- (2) 5/16" Washers
- (2) 5/16" Nyloc Nuts

Mounting Bracket Hardware Kit:

- (2) 5/16"-18 x 1" Hex Head Bolts
- (4) 5/16" Washers
- (2) 5/16" Nyloc Nuts

Tools Needed:

- 1/2" Wrench
- 1/2" Ratchet
- 10mm Wrench
- 10mm Ratchet
- 1-1/2" Ratchet Extension
- Retractable Magnet
- T-40 Star Wrench
- T-25 Star Wrench



CAUTION:

Always disconnect the negative (-) cable from the battery pack before beginning. If your cart is equipped with a Tow/Run switch, always switch to the TOW position before disconnecting the battery pack. Make sure you wear eye protection!

INSTALLATION INSTRUCTIONS:

1. Remove the rear bag rack, sweater basket, sand/seed bottle, seat back, and the rear struts.

NOTE: Retain hardware for future use.

2. Slide the sweater basket (with column supports already inside) into the Cargo Box (Item 1) until the peg on the basket goes through the second hole in the Cargo Box (the first hole is for the column support bolt) (Figure 1).

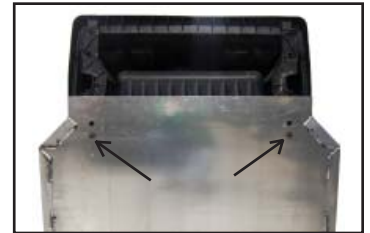


Figure 1

NOTE: Leave hardware loose for easy installation.

3. Mount the Cargo Box (Item 1) to the cargo basket with the two original 10mm Bolts (Figure 2).



Figure 2

4. Bolt the Mounting Brackets (Item 2) onto the cart by mounting them to the bag well in the front holes using two 5/16"-18 x 1" Hex Head Bolts, for 5/16" Washers, and two 5/16" Nyloc Nuts (Figure 3).



Figure 3

5. Set the Cargo Box (Item 1) with the sweater basket onto the cart, making sure the pegs on the cart go through the holes in the column supports (Figure 4).



Figure 4

6. Loosely bolt the sweater basket to cart using the four original bolts.

7. Using a retractable magnet carefully insert the rear column support bolt down through the inside of the sweater basket and into the hole. Tighten with your ratchet and extension bar (Figure 5).



Figure 5

8. Bolt the Cargo Box (Item 1) to the Mounting Brackets (Item 2) using two 5/16"-18 x 1" Carriage Bolts, two 5/16" Washers, and two Nyloc Nuts (Figure 6).



Figure 6

9. Remount rear struts, rear seat back, and the sand/seed bottle if desired.

10. Locate the Tailgate Rubber Latch (Item 3) and mount with included hardware (Item 5) (Figure 7).



Figure 7

11. Twist Tailgate Rubber Bumpers (Item 4) into place (Figure 8).



Figure 8

NOTE: Tighten all hardware securely.



Buggies Unlimited
1-888-444-9994
www.buggiesunlimited.com
© Copyright 1997-2008 Buggies Unlimited. All Rights Reserved.