

RDC CC1 WDGR DLX DELUXE WOODGRAIN RADIO CONSOLE Installation Instructions for Club Car 1982 - 1999 Models



A. Inspection of Parts

1. Inspect all parts. (Fig. D1.)
2. Remove Console top cover



B. Clean Factory Surfaces

1. Thoroughly clean (using method in Step A.3) all applicable surfaces highlighted in Fig. D1.

⚠ C. Install Speakers

1. Using speaker manufacturer supplied template, carefully cut speaker openings.
2. Install speakers as instructed by manufacturer.



RDC CC1 WDGR DLX DELUXE WOODGRAIN RADIO CONSOLE

Installation Instructions for Club Car 1982 - 1999 Models



D. Install Radio

1. Using radio manufacturer supplied template, or instructions carefully cutout radio opening above Storage compartment.



2. Install radio as instructed by manufacturer.

E. Complete Wiring of Radio Console prior to Cart Installation

1. Complete all required Speaker, Antenna, and Radio wiring, as instructed by each manufacturer.
2. Locate and Cut access holes in Console top cover as needed for antenna and power wiring.
3. Route wires through holes
4. Re-install Console top cover.



Buggies Unlimited
888-444-9994
buggiesunlimited.com


RDC CC1 WDGR DLX DELUXE WOODGRAIN RADIO CONSOLE

Installation Instructions for Club Car 1982 - 1999 Models



F. Attach Driver and Passenger Side Mounting Brackets

1. Install Brackets into Radio Console .

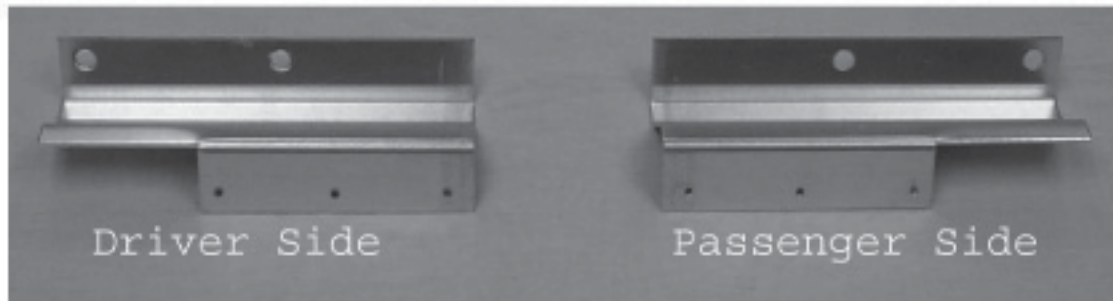

2. Using 6 included screws attach brackets to Radio Console. Use care not to overtighten.



RDC CC1 WDGR DLX DELUXE WOODGRAIN RADIO CONSOLE

Installation Instructions for Club Car 1982 - 1999 Models



G. Prepare Cart for Radio Console Installation

- ➔ 1. Remove 4 Front upper roof mount bolts, and save for reinstallation.
- ➔ 2. Position the Radio Console between the Roof and the inside edge of the roof supports.



- ➔ 3. Align the 4 bracket holes with the four holes in the roof and roof supports.

- ➔ 4. Reinstall and tighten previously removed roof mount bolts.

⚠ H. Complete all Wiring

- ➔ 1. Complete all wiring as necessary.

Note: Consult cart owners manual, and manufactures instructions of proper power wiring requirements.

I. Clean Up

- ➔ 1. Wipe down (using method in Step A. 3.) all molded surfaces to remove fingerprints, etc..
- ➔ 2. Remove protective covers from vehicle interior.

Buggies Unlimited
888-444-9994
buggiesunlimited.com