



Caution: Wear Appropriate Eye Protection!




Precedent Chameleon

For illustration purposes we have removed the top for better visual aid. It is not necessary to do this as you can do all the installation with the top on the car. Remove all parts from package and lay them out in an organized manner. Start by doing a dry fit of the side rails to the top. Notice the rails will fit evenly with the front top supports.




Side Rail

Once you have completed the dry fit, install the $\frac{3}{4}$ " spacers on the front and rear rail assembly. For the front bolt, use the supplied clip nut on the rail for easier bolt installation (use bolts that are in the kit). C-channels face outward.

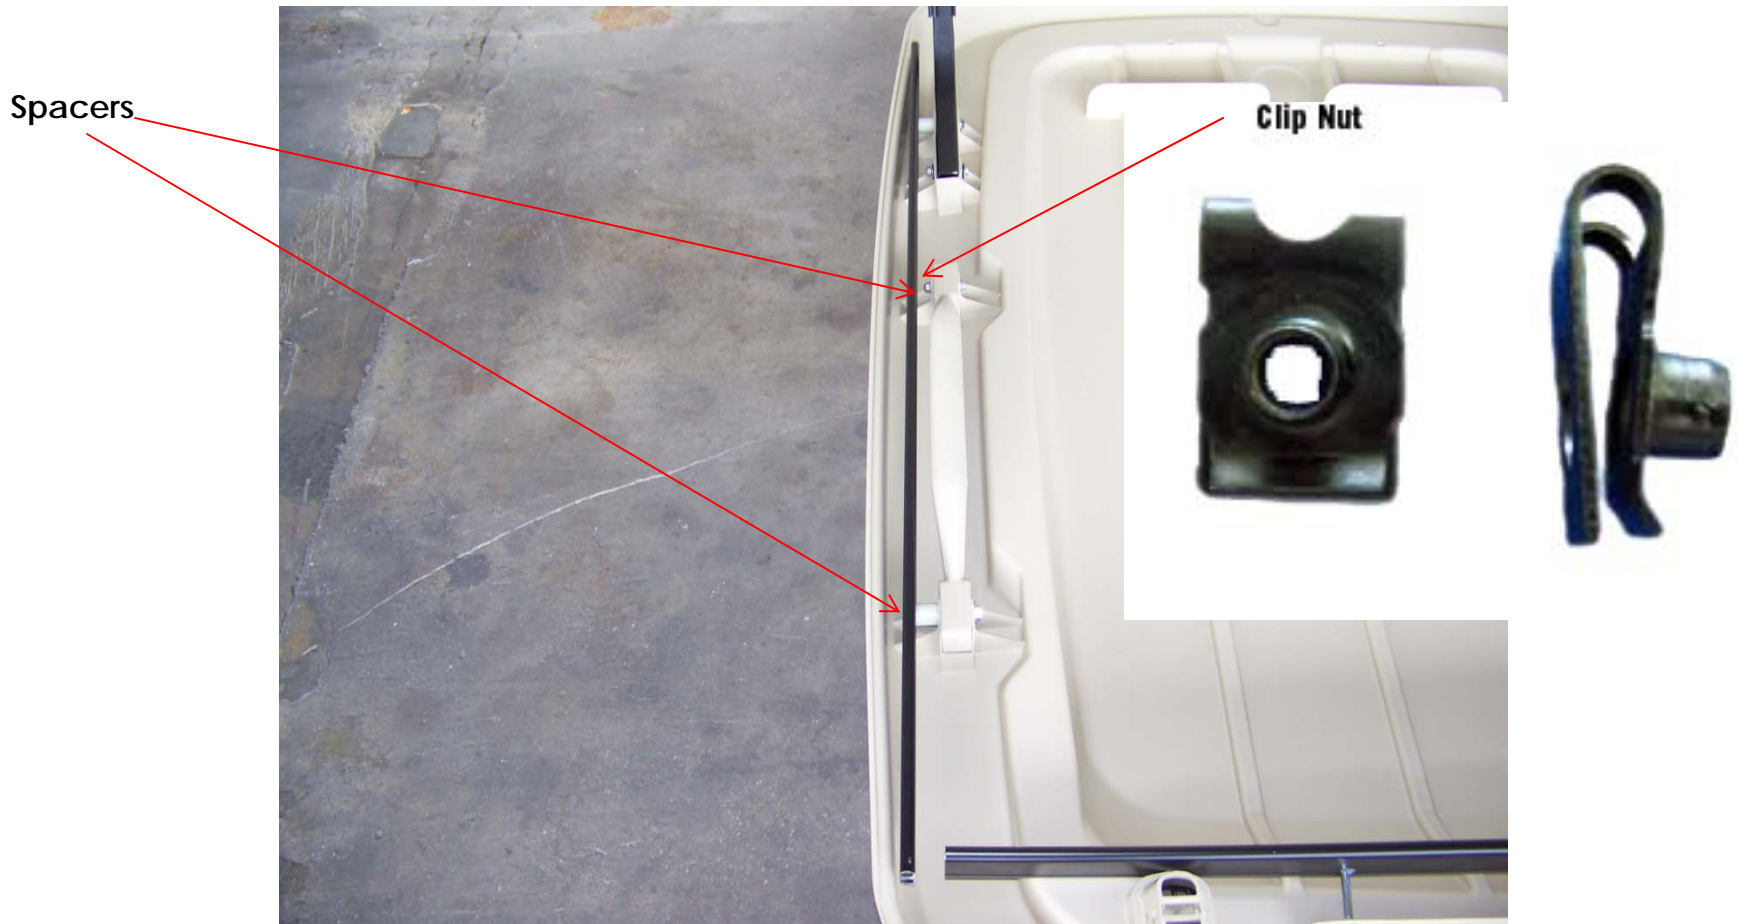

Rear Rail

Center rear rail and install the two supplied bolts, nuts and washers. Tighten the self locking nut until a slight bow is seen in the rail. The rail bolts to the inside with C-channels facing inward.

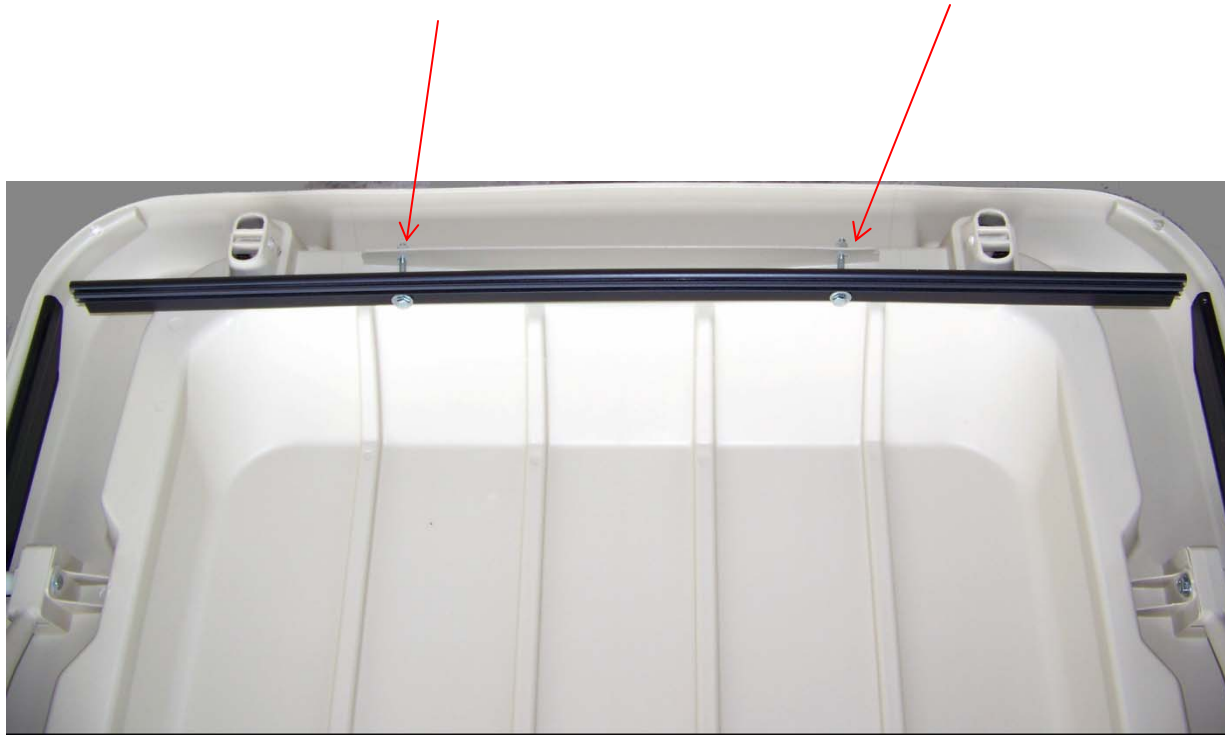

Snap Alignment

The final result is having rear rail and side rail alignment as seen below. Also notice the Valance snap alignment.



Installed On Car



© Copyright Nivel LLC
All Rights Reserved