

CGB EZ2 ALUM-Aluminum Box
CGB EZ2 BLK-Black Steel Box
Installation Instructions for 1994.5 & Up EZGO Medalist/TXT Cargo Boxes




CAUTION: DO NOT TRANSPORT PASSENGERS IN CARGO BOX.

Kit Components:

Item # Description

- 1 Cargo Box
- 2 Cargo Box Channel
- 3 U-Bracket
- 4 Right Hand Universal Channel
- 5 Left Hand Universal Channel
- 6 Right Hand Seat Back Bracket
- 7 Left Hand Seat Back Bracket
- 8 Tailgate Rubber Latches
- 9 Tailgate Rubber Bumpers
- 10 Tailgate Hardware Kit
- 11 Hardware Kits

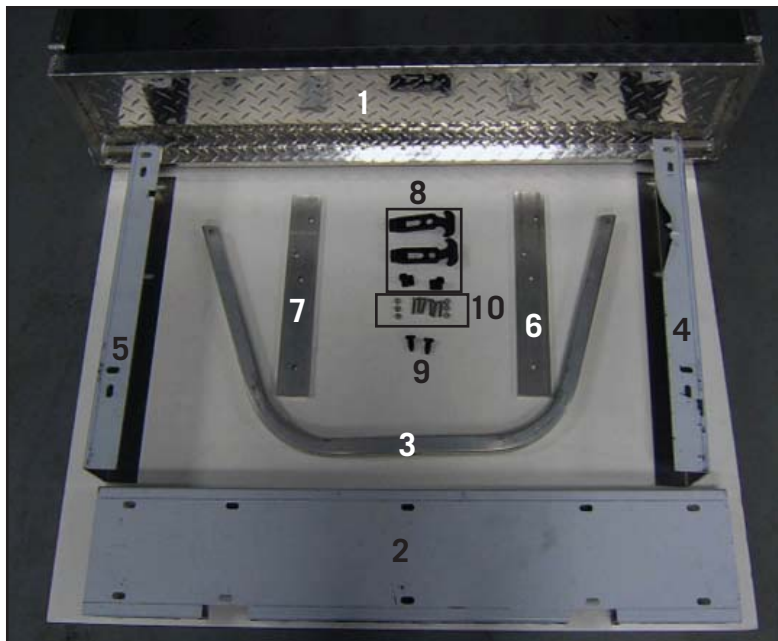

Hardware Kits (Item 11) Contain:

Right Hand Universal Channel

- (2) 3/8"-16 x 1" Hex Head Bolts
- (2) 5/16"-18 x 1" Carriage Bolts
- (2) 3/8" Washers
- (2) 5/16" Washers
- (2) 5/16" Nyloc Nuts

Left Hand Universal Channel

- (2) 3/8"-16 x 1" Hex Head Bolts
- (2) 5/16"-18 x 1" Carriage Bolts
- (2) 3/8" Washers
- (2) 5/16" Washers
- (2) 5/16" Nyloc Nuts

Bottom Channel Hardware Kit

- (6) 5/16"-18 x 1" Carriage Bolts
- (6) 5/16" Washers
- (6) 5/16" Nyloc Nuts

U-Bracket Hardware Kit

- (1) 5/16"-18 x 2" Hex Head Bolts
- (2) 5/16"-18 x 1 3/4" Hex Head Bolts
- (6) 5/16" Washers
- (3) 5/16" Nyloc Nuts


Seat Back Brackets

- (4) 5/16"-18 x 1" Hex Head Bolts
- (8) 5/16" Washers
- (4) 5/16" Bolts

Tools Needed:
-Phillips Head Screwdriver
-(2) 1/2" Wrenches
-(1) 3/8" Wrench

HDW EZ2 RSTRT Rear Strut Components (sold separately from Cargo Boxes)

- (2) Rear Strut Brackets (Items 12 & 13)
- (4) 1/4"-20 x 1" Hex Head Bolts
- (8) 1/4" Washers
- (4) 1/4" Nyloc Nuts

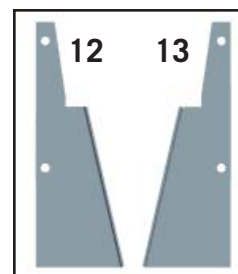



CAUTION:

Always disconnect the negative (-) cable from the battery pack before beginning. If your cart is equipped with a Tow/Run switch, always switch to the TOW position before disconnecting the battery pack. Make sure you wear eye protection!

INSTALLATION INSTRUCTIONS:

1. Remove the front seat back cushion and the rear bag rack assembly from the cart.

NOTE: Leave hardware loose for easy installation.

2. Locate the Left and Right Hand Universal Channels (Items 4 & 5) and install them on the cart using the existing holes with two 3/8"-16 x 1" Hex Head Bolts and two 3/8" Washers per each side (Figure 1 & 2).

3. Bolt the Cargo Box Channel (Item 2) to the bottom of the Cargo Box (Item 1) using six 5/16"-18 x 1" Carriage Bolts, six 5/16" Washers, and six 5/16" Nyloc Nuts (Figure 3).

4. Bolt the U-Bracket (Item 3) to the bottom of the Cargo Box (Item 1) using one 5/16"-18 x 1 3/4" Hex Head Bolt, two 5/16" Washers, and one 5/16" Nyloc Nut per side (Figure 4).

5. Locate the Seat Back Brackets (Item 6 & 7) and bolt them to the Cargo Box (Item 1) using two 5/16-18 x 1" Hex Head Bolts, four 5/16" Washers, and two 5/16" Nyloc Nuts per bracket (Figure 5).



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

6. Line up the Cargo Box (Item 1) with the cart and bolt the U-Bracket (Item 3) to bag well using one 5/16"-18 x 2" Hex Head Bolt, two 5/16" Washers, and one 5/16" Nyloc Nut (Figure 6).



Figure 6

7. Using four 5/16"-18 x 1" Carriage Bolts, four 5/16" Washers, and four 5/16" Nyloc Nuts, mount the Cargo Box (Item 1) through the Universal Channels (Items 4 & 5) to the golf cart (Figure 7).



Figure 7

8. Locate the Tailgate Rubber Latch (Item 8) and mount with included hardware (Item 10) (Figure 8).



Figure 8

9. Twist the Tailgate Rubber Bumpers (Item 9) into place (Figure 9).



Figure 9

10. Remount the seat backs using original hardware.

NOTE: Tighten all hardware securely.

Optional Canopy Installation with Strut Mounting Kit (sold separately):

P/N: HDW EZ2 RSTRT

1. Place the Rear Strut Brackets (Items 12 & 13) inside of the Cargo Box (Item 1) and line them up with the rear holes. Bolt them together with Seat Back Brackets (Items 6 & 7) and Cargo Box (Item 1) for each side (Figure 10).



Figure 10

2. Mount the rear struts to the Rear Strut Brackets (Items 12 & 13) using two 1/4"-20 x 1" Hex Head Bolts, four 1/4" Washers, and two 1/4" Nyloc Nuts per strut (Figure 11).



Figure 11



Buggies Unlimited
1-888-444-9994
www.buggiesunlimited.com
© Copyright 1997-2008 Buggies Unlimited. All Rights Reserved.