


# WND EZ2 WTINT WND EZ2 WCLR Winged Windshield Tinted & Clear EZGO Medalist/TXT 1994-present



## Components

- A. Upper Windshield Retainers (2)
- B. Metal Locating Clips (2)
- C. Washers (4)
- D. Self Drilling Screws (2)
- E. Rivets (4)

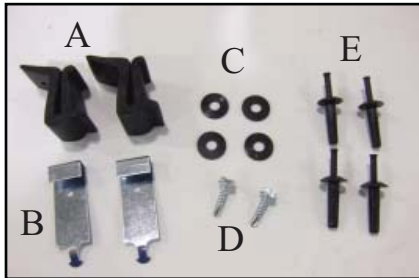

**CAUTION:** Remember to wear appropriate eye protection while performing the tasks in this instruction.

## Installation Instructions

1. Locate the lower set of predrilled holes on front roof struts. Hang the (2) metal locating clips in the predrilled holes. (See figure 1)
2. Place the windshield so that it rests in the metal locating clips. The rubber bumpers should be on the bottom windshield panel. Open windshield at this time.
3. Locate the four grommets on the windshield and use a marker to mark area to be drilled. (See figure 2) Remove windshield from metal locating clips.
4. Drill marked holes using a 1/4" drill bit.
5. Hang the windshield on the (2) metal locating clips. (See step 2)
6. Place a plastic washer between the windshield and roof strut. Align with grommet. Place rivet through grommet on windshield, washer, and drilled hole.
7. Using a hammer or mallet, tap rivet lightly until rivet is flush with windshield. Repeat using the other rivets and washers. (See figure 3)
8. Install (2) upper windshield retainers. Clip retainer to strut (See figure 4), and use self drilling screw to attach the retainer to the strut. This will be drilled on the inside of the strut. (See figure 5)

NOTE: Please read additional cleaning instructions for proper care of windshield.



Figure 1



Figure 2



Figure 3

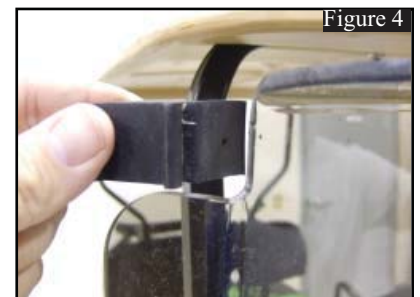


Figure 4



Figure 5