



XT Chameleon




Caution: Wear Appropriate Eye Protection!



For illustration purposes we have removed the top for better visual aid. It is not necessary to do this as you can do all the installation with the top on the car. Remove all parts from package and lay them out in an organized manner. Start by doing a dry fit of the side rails to the top. Notice the rails will fit evenly with the front top supports. At the rear mounting area notice the rail will be slightly lower than the hand hold. This will create an angle from front to rear.


Side Rail

Once you have completed the dry fit, install the self tapping screws supplied in the kit (both sides). The C-channels will face downward/inward for bead installation.

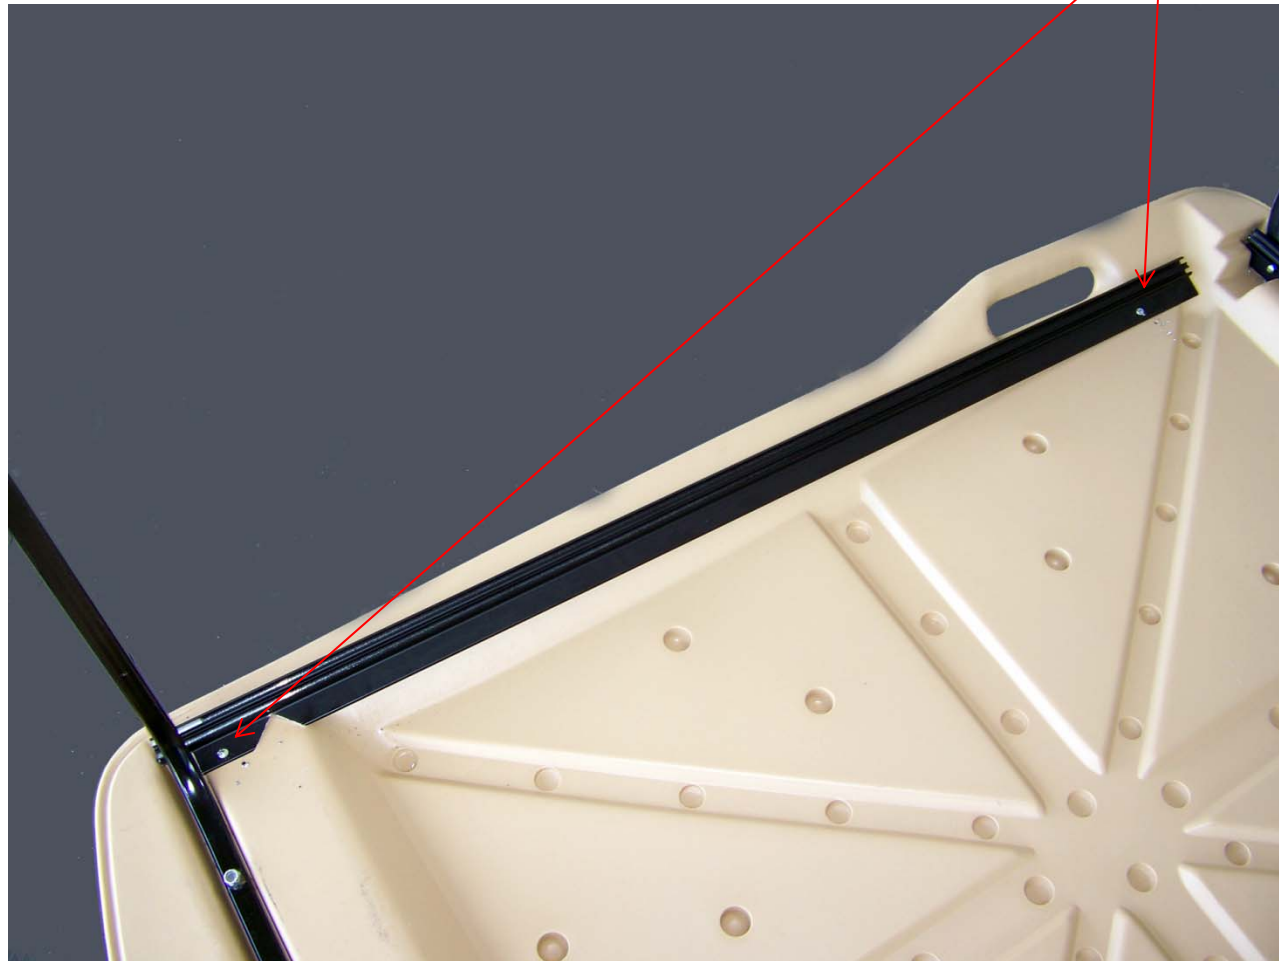


Side Rail Alignment

Hand hold alignment and front alignment.

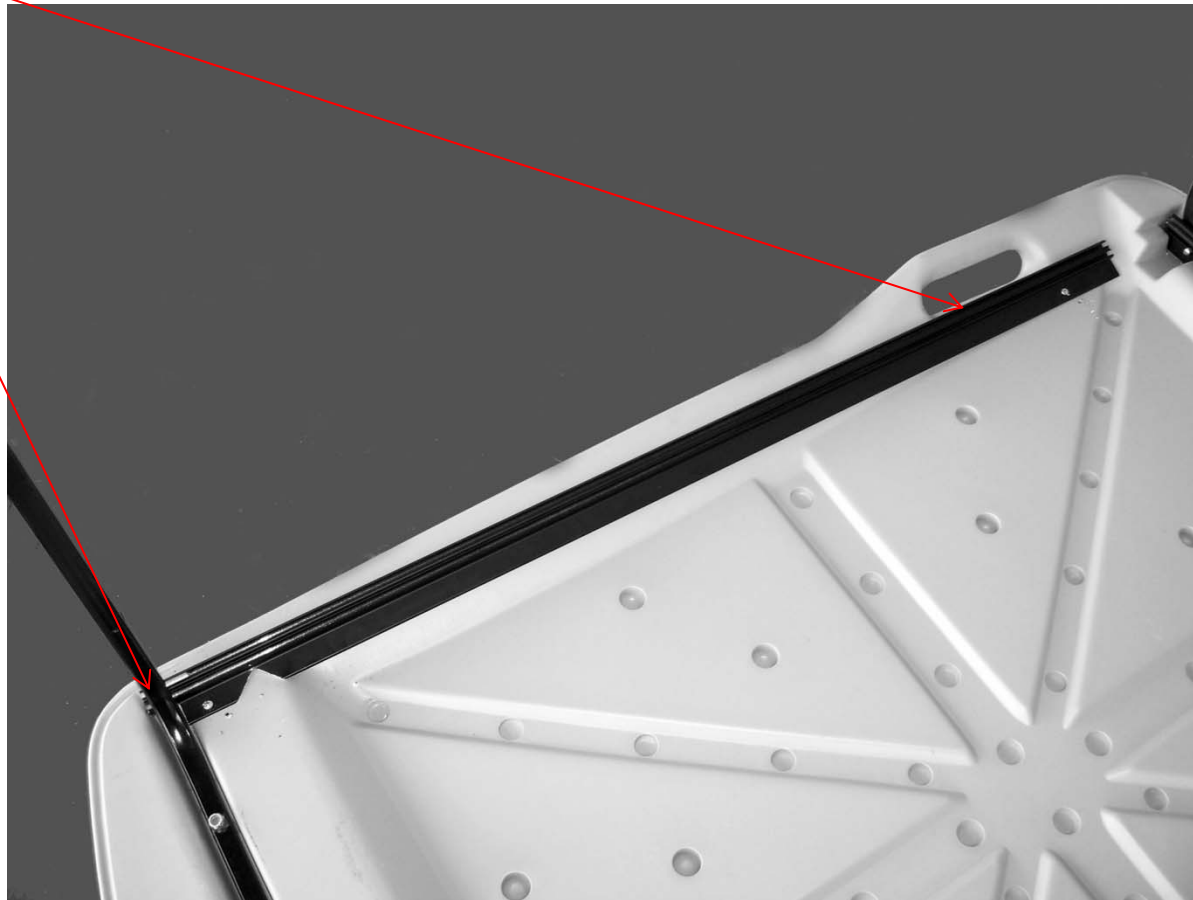

Rear Rail Screw Placement

Dry fit the rear rail to the top. Install the self tapping screws. Once you have the rail centered and aligned, you will install the screws into the rear top mounting struts as seen below. The rail is mounted to the inside.

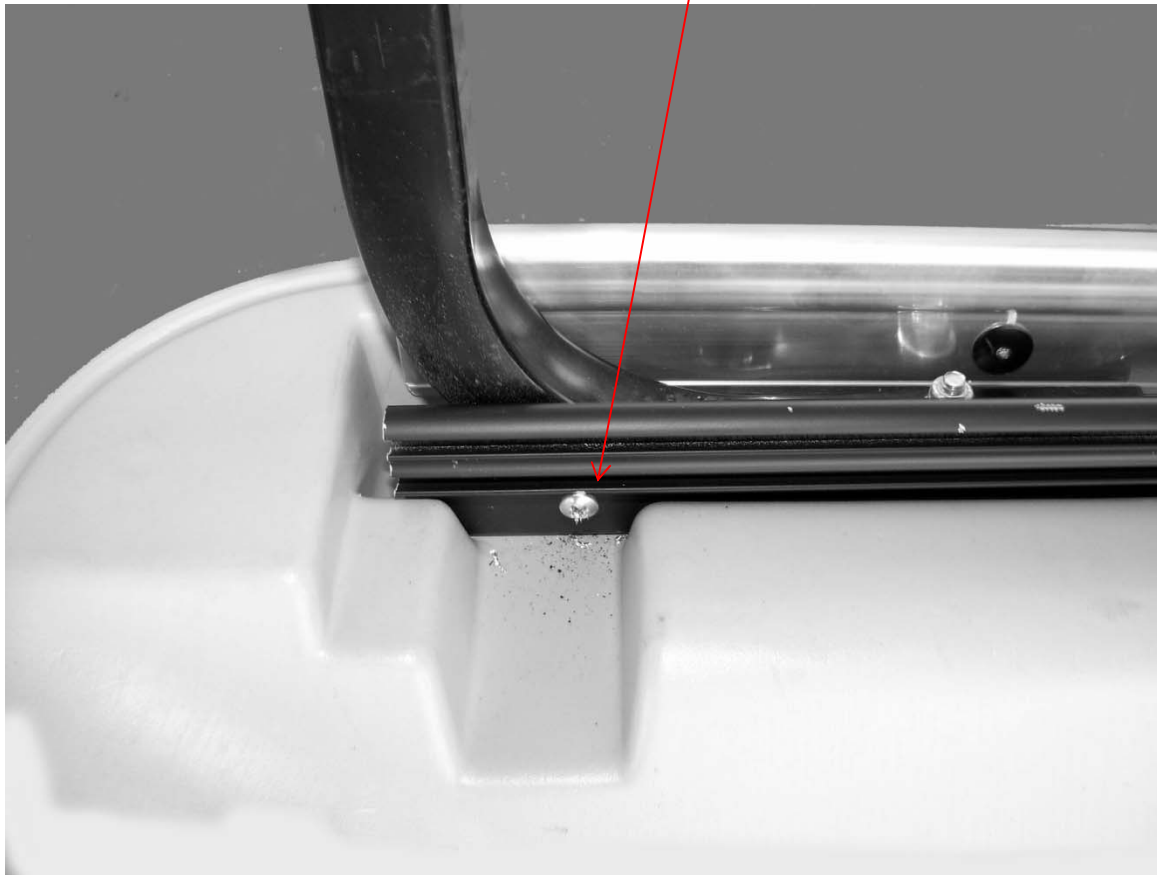



Valance Snap Area

Install the Valance snap in the area shown. Once again do a dry fit to make sure of correct location.
Club Protector Rail.

