




Wear the appropriate eye protection!

E-Z-GO TXT/Medalist
Gunmetal Brush
Guard
BSG EZ2 MTL



If your cart uses a sun roof, remove the front strut bolts on both sides (5/16" bolts). Set the new guard in place making sure the 1/2" metal spacers are in place before inserting the bolts. Start all the bolts before tightening all the way.

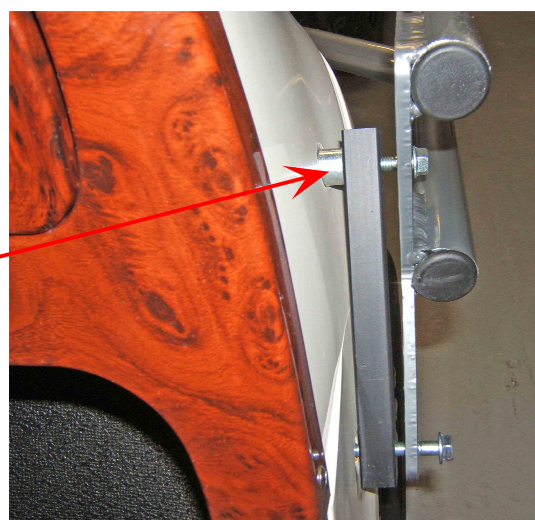

If your cart does not use a sun roof, you will need two BSG EZ2 PLATE spacers and two HDW EZO KC75048 spacers. Should your bolts be too short increase the length to 2 3/4".

