

CGB EZ1 ALUM-Aluminum Box
CGB EZ1 BLK-Black Steel Box
Installation Instructions for 1988-1994 EZGO Marathon Cargo Boxes




CAUTION: DO NOT TRANSPORT PASSENGERS IN CARGO BOX.

Kit Components:

Item # Description

- 1 Cargo Box
- 2 Cargo Box Channel
- 3 U-Bracket
- 4 (2) 1" Square Tubing Caps *
- 5 Tailgate Rubber Latches
- 6 Tailgate Rubber Bumpers
- 7 Tailgate Hardware Kit
- 8 Hardware Kits

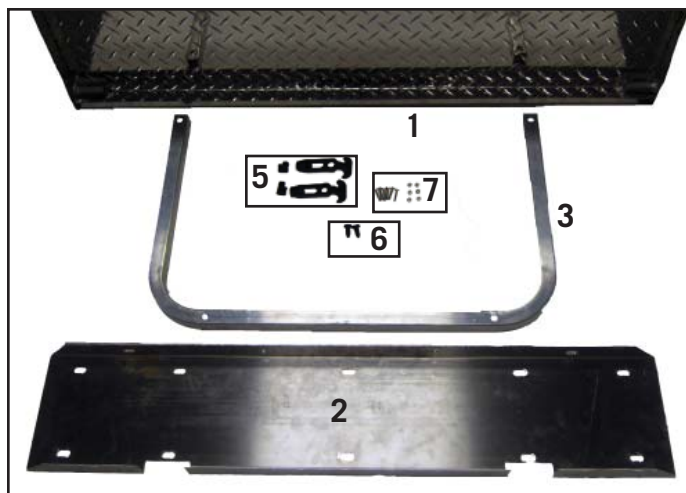

Hardware Kits (Item 8) Contain:

*Item 4 not shown

Bottom Channel Hardware Kit

- (6) 5/16"-18 x 1" Carriage Bolts
- (6) 5/16" Washers
- (6) 5/16" Nyloc Nuts

U-Bracket Hardware Kit

- (4) 5/16"-18 x 1 3/4" Hex Head Bolts
- (8) 5/16" Washers
- (4) 5/16" Nyloc Nuts

Seat Back Bracket Hardware Kit

- (4) 5/16"-18 x 1 3/4" Hex Head Bolts
- (8) 5/16" Washers
- (4) 5/16" Nyloc Nuts


Tools Needed:

- Hacksaw or Reciprocating Saw
- Drill
- 3/8" Drill bit
- 1" Drill bit
- Phillips Head Screwdriver
- (2) 1/2" Wrenches
- Level

HDW ML RSTRT Rear Strut Components (*Sold Separately from Cargo Box*)

- (2) Rear Struts (Items 9, shown at right)
- (4) 5/16"-18 x 1 3/4" Hex Head Bolts
- (8) 5/16" Washers
- (4) 5/16" Nyloc Nuts

NOTE: Reuse existing hardware for top mounting

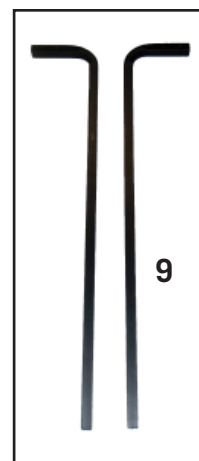



CAUTION:

Always disconnect the negative (-) cable from the battery pack before beginning. If your cart is equipped with a Tow/Run switch, always switch to the TOW position before disconnecting the battery pack. Make sure you wear eye protection!

INSTALLATION INSTRUCTIONS:

1. Remove rear seat back cushions from cart. Note: If your cart is equipped with a canopy, prop a support beam up to keep the canopy shape from being distorted and remove the rear struts.

2. Cut the bag rack off flush with the seat back (Figure 1).

3. File the edges to remove burs and install the two Square Tubing Caps (Items 4).

NOTE: Leave all hardware loose for easy installation.

4. Bolt the Cargo Box Channel (Item 2) to the bottom of the Cargo Box (Item 1) with the slots facing towards the tailgate. Use six 5/16"-18 x 1" Carriage Bolts, six 5/16" Washers, and six 5/16" Nyloc Nuts (Figure 2).

5. Bolt the U-Bracket (Item 3) to the inside of the Channel (Item 2) using one 5/16"-18 x 1 3/4" Hex Head Bolt, two 5/16" Washers, and one 5/16" Nyloc Nut per side (Figure 3).

6. Align the Cargo Box (Item 1) with the seat back brackets (already on the cart) right under the curved part of the bracket. Mark and drill two 3/8" holes per side using the holes in the front of the Cargo Box as your pattern (Figure 4).

7. Align the seat back to the seat back bracket and mark hole you just drilled in the bracket onto the seat back itself. Drill out a 1" hole, approximately 1/2" deep, in the seat back to make clearance for the head of the bolt.

8. Bolt the Cargo Box (Item 1) to the seat brackets using two 5/16"-18 x 1 3/4" Hex Head Bolts, four Washers, and two Nyloc Nuts per side (Figure 5).



Figure 1



Figure 2



Figure 3

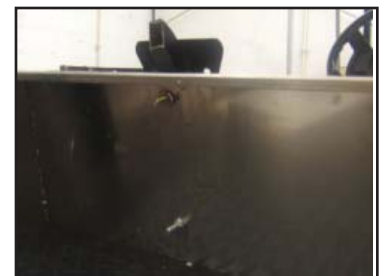


Figure 4

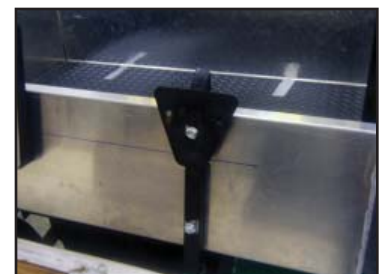


Figure 5

9. With the Cargo Box (Item 1) in place, align the U-Bracket (Item 3) to the rear bumper, and mark two holes. Remove the U-Bracket (Item 3) and drill 2-3/8" holes through the rear bumper. Bolt the U-Bracket (Item 3) back to the Cargo Box (Item 1) and then to the Rear Bumper using two 5/16"-18 x 1 3/4" Hex Head Bolts, two Washers, and two Nyloc Nuts (Figure 6).



Figure 6

11. Bolt the seat backs back onto the cart.

12. Locate the Tailgate Rubber Latch (Item 5) and mount with included hardware (Item 7) (Figure 7).



Figure 7

13. Twist the Tailgate Rubber Bumpers (Item 6) into place (Figure 8).



Figure 8

NOTE: Tighten all hardware securely.

Optional Canopy Installation with Strut Mounting Kit (sold separately):

P/N: HDW ML RSTRT

1. Replace the original rear struts with the New Rear Struts (Item 9) and align on the inside of the Cargo Box (Item 1), making sure the canopy stays level. Mark and drill two 3/8" holes per side. Mount the New Rear Struts using two 5/16"-18 x 1 3/4" Hex Head Bolts, four Washers, and two Nyloc Nuts per side (Figure 9).

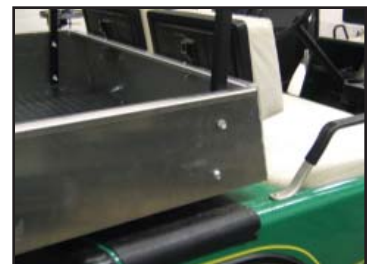


Figure 9

Copyright© 1997-2010. All Rights Reserved.