
RKP EZ2 3393 ALUMINUM RUNNING BOARD KIT

Instructions for EZGO TXT Models

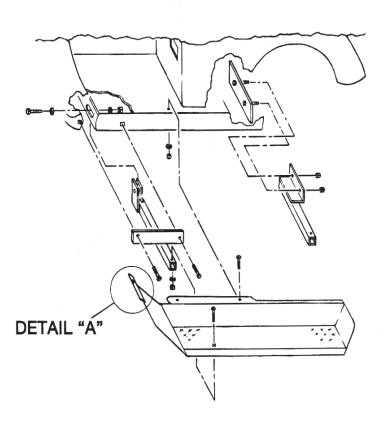

Copyright® 1997-2010. All Rights Reserved.

BW 406

PARTS LIST


- 1. Running board only LH
- 2. Running board only, RH
- Mount bracket, front LH
- 4. Mount bracket, front RH
- 5. Mount bracket, rear LH
- 6. Mount bracket, rear RH
- 7. Hardware Kit

HARDWARE LIST

A.	1/4-20 x 1" Phillips Truss Head Bolt	.4 pcs
B.	1/4-20 x 1-3/4" Phillips Truss Head Bolt	.4 pcs
C.	5/16-18 x 1" Hex Bolt	.4 pcs
D.	5/16-18 x 1-1/4" Hex Bolt	.2 pcs
E.	1/4-20 Nylok Nut	.8 pcs
F.	5/16-18 Nylok Nut	10 pcs
G.		
H.	1/4" Flat Washer, SAE	.8 pcs
1.	5/16" Flat Washer, SAE	2 pcs

ASSEMBLY INSTRUCTIONS

- A. Remove old plastic rocker panels.
- B. Install front RH & LH mount brackets (#3, 4) as shown. Use 2 ea. hardware D, 4 ea. C, 6 ea. F and 12 ea. I.
- C. Install rear RH & LH mount brackets (#5, 6) as shown. Use 4 ea. hardware ${\bf F}$.
- D. Lay running board in place and attach to car frame and mounting brackets. Use 4 ea. hardware A, E & H for mounting to frame. Use 4 ea. hardware B, E & H for fastening to mount brackets.
- E. As shown in VIEW A, the front of the running board is secured to the frame under the cowl by either rivets or bolts (not provided).

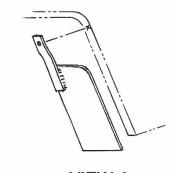

VIEW A

