



E-Z-GO TXT Nerf Bars

Installation Instructions

Black- Part# 29070, w/ DP Inlay Part# 29075

Stainless- Part# 28380, w/ DP Inlay Part# 28345

Parts List

Driver Side Nerf Bar-1

Passenger Side Nerf Bar-1

5/16 x 1 Bolts-4

5/16 Locknuts-8

1/4 x 3/4 SS BH Bolts-6 (for DP inlays only)

1/4 SS Washers-6 (for DP inlays only)

1/4 Lock Nuts-6 (for DP inlays only)





For Part#'s 29075/28345 Only



Always wear appropriate eye protection!

NOTE: Driver and passenger side nerf bar are different, the top picture shows the nerf bars as you would see them looking at the driver side of the cart. The flat mounting plate goes to the rear of each side.

1. Take the driver side nerf bar and loosely install on the threaded stock studs behind the stock rockers as shown in FIGURE 1.
2. Using a c-clamp or vise grips clamp the front of the nerf-bars to the cross support behind the front portion of the rocker. Make sure the nerf bar mounting bracket is on the front side of the stock cross support as shown in FIGURE 2.
3. Measure from bottom of rear portion of nerf bar to the rocker and do the same to the front portion of the nerf bar as shown in FIGURE 3. Looking down from above the nerf bar use the stock rocker as a guide to make sure nerf bar is running parallel to the rocker as shown in FIGURE 4. Adjust as needed.
4. Using a 5/16 drill bit, drill both holes through the cross support. NOTE: Make sure stock wiring harness is not in the way when drilling!
5. Using the supplied 5/16 x 1 bolts and locknuts securely mount the front of the nerf bars to the stock cross support.
6. Securely tighten rear locknuts.
7. Repeat steps for the passenger side.
8. If you purchased the nerf bar set with diamond plate inlays install them at this time using the supplied 1/4 x 3/4 SS BH bolts, washers and locknuts.

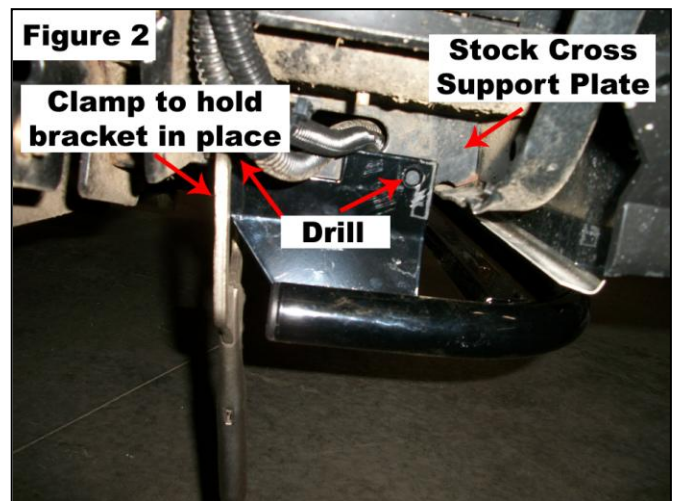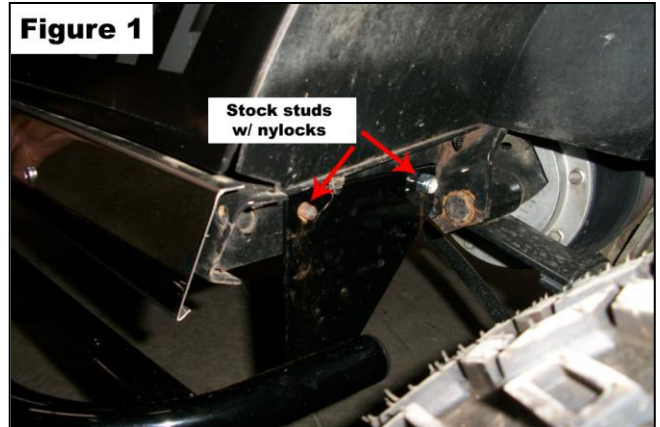

866-405-2537

www.jakesliftkits.com