

Kinect™ Touchscreen Display

INSTALLATION INSTRUCTIONS MadJax® XSeries (Gen 2)

Note: This kit contains wiring harnesses for multiple vehicle fitments. Any harnesses not referenced in these instructions are not required for this installation and may be discarded.

STEP 1

Ensure that the cart is powered off and not plugged in to power. Switch key to OFF position. Remove the existing display screen by popping it out of the dash. Pull the display away from the dash to expose the wiring, and unplug all of the connectors.



STEP 2

Plug in and connect the wiring of the new display into the previously connected vehicle wiring within the dash opening. Once all the plugs are connected, pop the new display in place.



STEP 3

Turn the battery on, and power on the vehicle. Remove the screen protector, and configure display settings* to your preference.



****Continue to Display Screen Configuration***

DISPLAY SCREEN CONFIGURATION

STEP 1 CHECK FOR OTA (OVER-THE-AIR) UPDATE

On the main display interface, proceed to the “Settings” menu as shown below.





STEP 2

Within the “Settings” menu, navigate to “WLAN” on the side bar menu. Confirm that Wi-Fi is turned on by toggling the “Scan Wi-Fi” button.




STEP 3

Check for an OTA Update by scrolling to “Version” on the side bar menu, and then “Software OTA”. Click the “Start” button if an update is available.

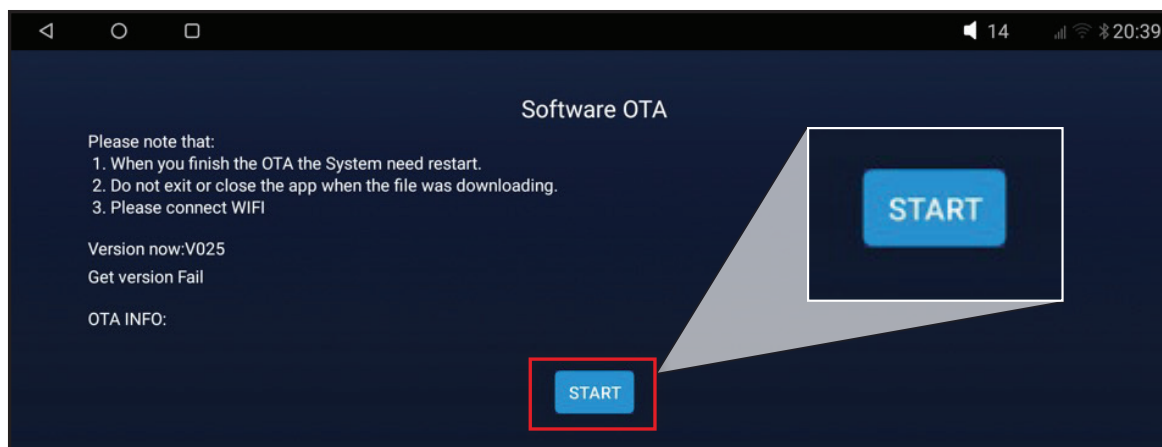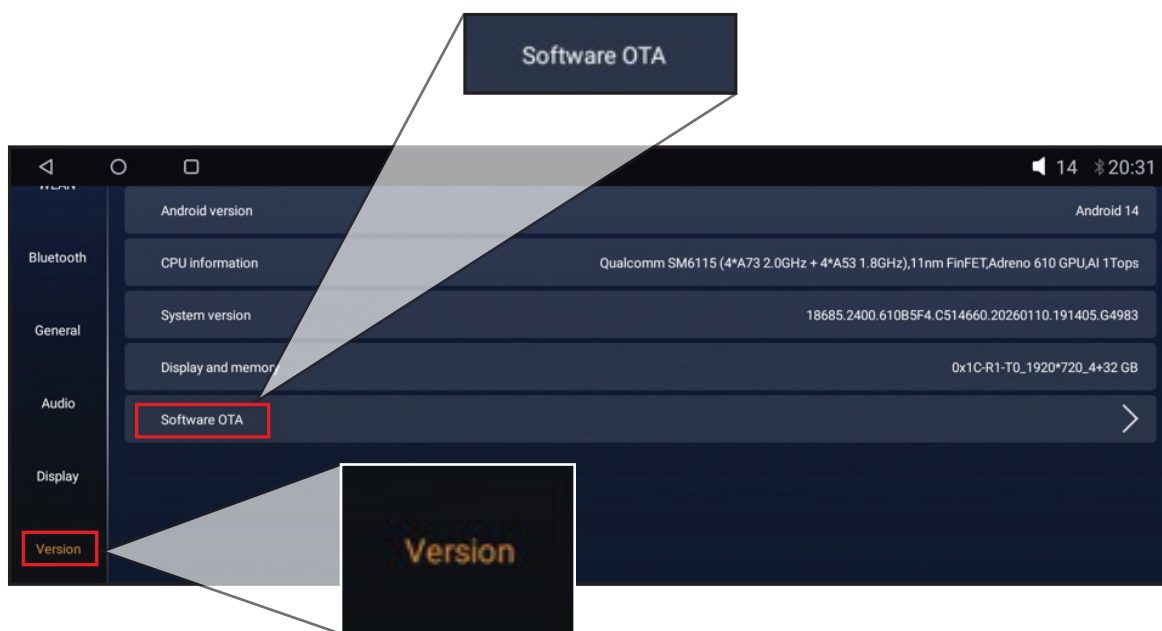


STEP 4 CONFIGURE SETTINGS FOR YOUR CART MODEL

On the main display interface, proceed to “Settings” within the side bar menu, and then proceed to click “Version”. After “Version” is selected, click on “Android Version” four times.

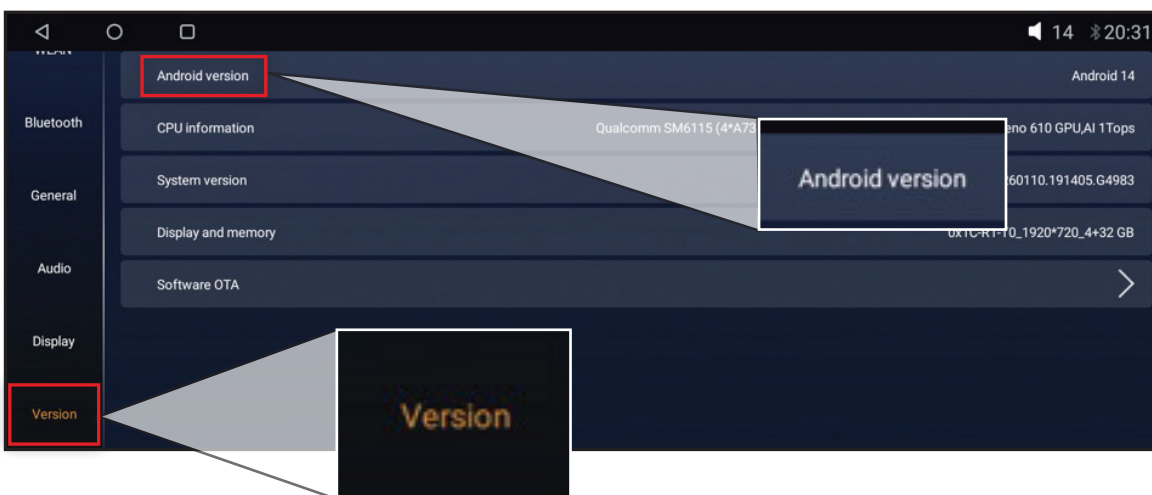


STEP 5

When the “Please input password” field pops up, enter the factory default password: “8888”. Selecting “OK” enables the “Factory” configuration menu.

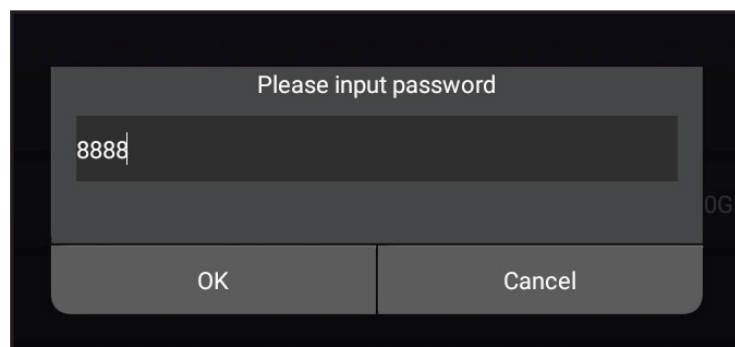

STEP 6

Within the “Factory” menu, click on “Car Model” to access the list of configuration options. Locate and select “**MadJax® XSeries Gen2**” from the list.

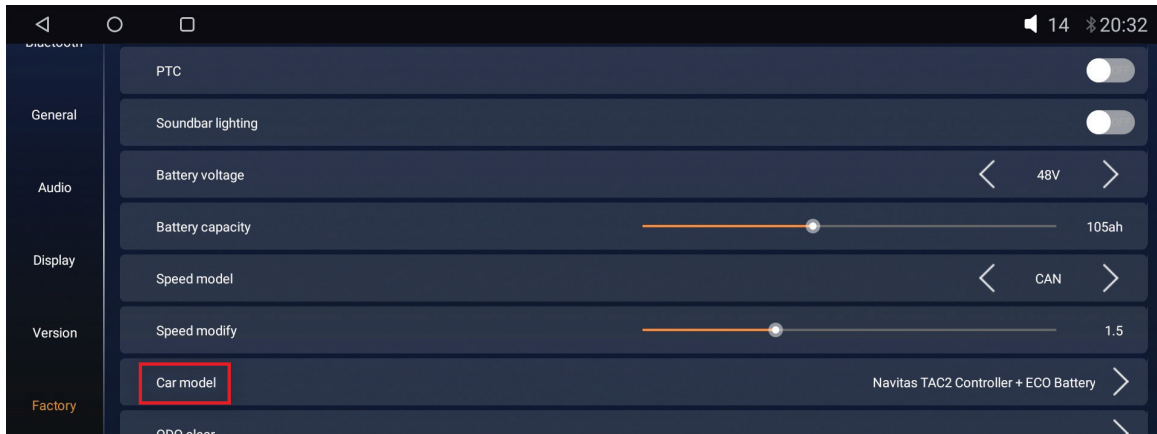


STEP 7

Return to the “Factory” menu, and toggle “Rear camera constant power” to “OFF”.



STEP 8

Within the “Settings” menu, select “Display”, and then “Rear Camera Type”. Select “NTSC”.

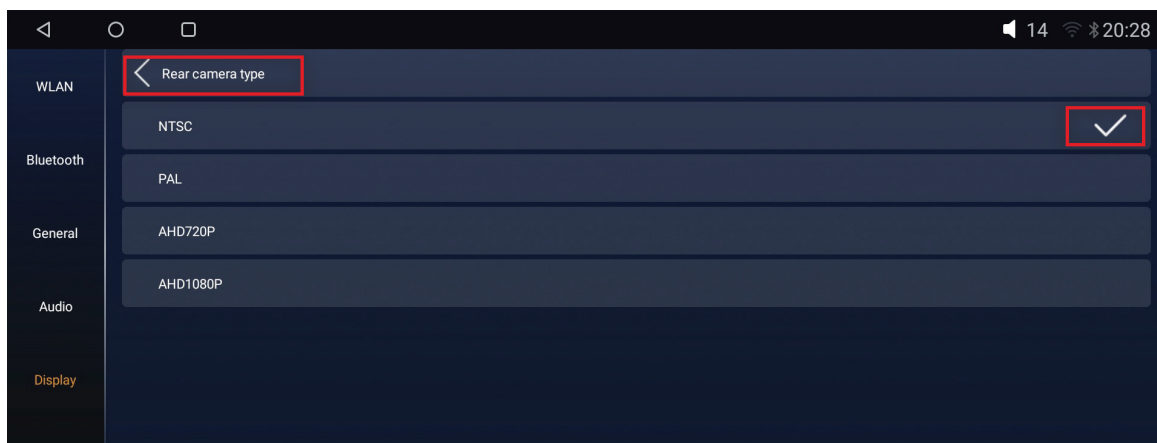

STEP 9**EXIT FACTORY MODE**

When finished making the necessary adjustments, toggle “Factory Mode” to “OFF” to prevent accidental changes and finalize settings.

**INSTALLATION COMPLETE**