

PROFX

INSTALLATION INSTRUCTIONS

PFX2012 Basic LED Light Kit

Fits E-Z-GO RXV® (2008 - 2015)

PFX2013 Basic LED Light Kit

Fits E-Z-GO RXV® (2016 - Up)



CAUTION: If you choose not to have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves cutting holes into your cart's body.


Please read through the instructions carefully. Before starting this project, remove the system's positive and negative connections from the battery or battery pack. This kit is designed for a 12V-48V operation only. Look behind each drill location **BEFORE YOU DRILL**.

Installer is responsible for damage (i.e. drilling into a wiring harness, battery, fuel tank etc.)


Headlight and Taillight Preparation

Headlight Preparation

1. Cut out the included headlight template following the guidelines.

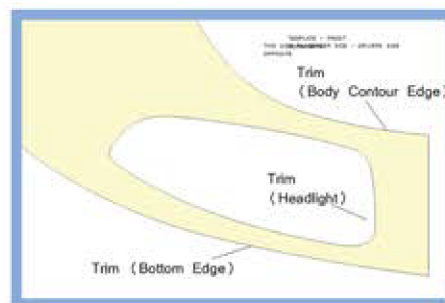

2. Using painter's tape, tape the template to the driver side front body of the cart. The dotted lines on the template will line up with the body lines of the cart.

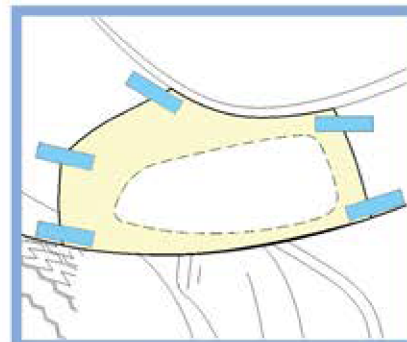

3. Use a marker or other marking device to trace the inside contour of the template.