

BSG YA3 CHR & BSG YA3 BLK

Brush Guard Installation Instructions

for Yamaha G14/16/19 1994-2001 Models



BUGGIES
UNLIMITED




Parts List

QTY	Description
1	Brush Guard
2	3/8-16 X 4 3/4" Bolts
2	3/8" Washers
2	3/8 Nyloc Nuts
2	1.2" Black Spacer

 *Always remember to wear appropriate eye protection!*




1. Remove the front bumper from cart, save the two bolts from the bumper for future use (Figure 1).
2. Support the A-Arm with a jack. Remove the existing cotter pins and A-Arm mounting bolts (Figure 2).
3. Place the two bolts from your hardware kit through the front of the brush guard. Add the spacers onto the back of the brush guard (Figure 3).

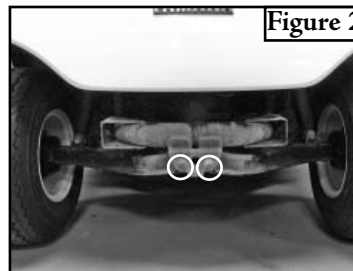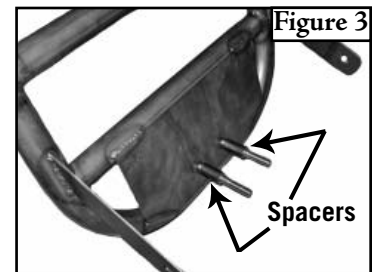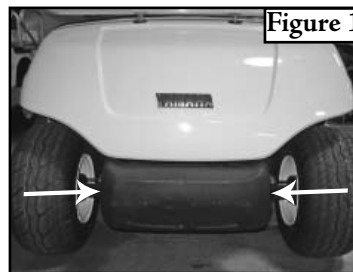

NOTE: *Leave all hardware loose until final step.*

4. Install the brush guard in place of vacated A-Arm bolts (Figure 4).
5. Bolt the brush guard to the frame of the cart using the two bolts from the front bumper you previously removed (Figure 5).
6. Install the nuts from your hardware kit onto the main mounting bolts. Securely tighten all Hardware.

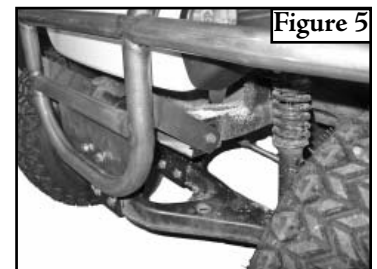

Buggies Unlimited
1-888-444-9994
www.buggiesunlimited.com