


YAMAHA PART #8107 G2/G9 ALUMINUM CARGO BED

INSTRUCTIONS FOR ALUMINUM CARGO BED YAMAHA G2/G9 PART #8107

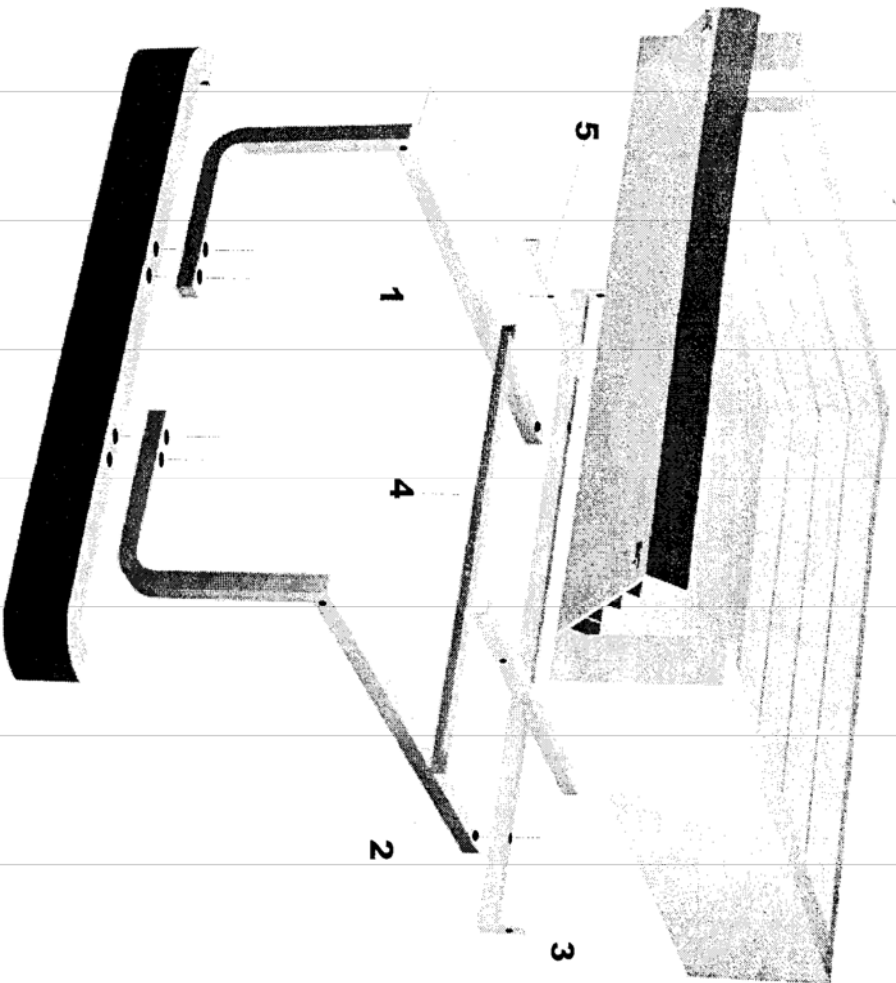

1. Remove back rack assembly.
2. Assemble mounting supports (Part 1&2) to cross brace (Part 3) using 5/16 x 2 1/2" bolts, nuts and washers **DO NOT FULLY TIGHTEN!**
3. Attach latch bar (Part 4) between supports using 1/4 x 1 3/4" phillips head bolts, nuts and washers.
4. Position assembly on car so that mounts are level running front to rear.
5. Remove plastic covers from seat side panels of car by drilling out plastic rivets.
6. Align cross brace (Part 3) between panels and drill mounting holes. Install using 5/16 x 1" bolts, nuts and washers.
7. Install bed assembly using 5/16 x 1 3/4" bolts, nuts and washers making sure a washer is in place between tubing and angle for a smooth hinge action. **DO NOT OVER TIGHTEN!**
8. Position and drill holes through top of bumper and attach mounting supports using 5/16 x 1 3/4" bolts, nuts and washers.
9. Align and tighten all bolts and replace side covers.

HARDWARE LIST

- 2-1/4"x1 3/4" Flat Phillips Bolts
- 4-5/16"x1" Hex Bolts
- 4-5/16"x1 3/4" Hex Bolts
- 2-5/16"x2 1/2" Hex Bolts
- 2-1/4" Lock Nuts
- 2-1/4" Washers
- 10-5/16" Lock Nuts
- 10-5/16" Washers