


**CGB YA6 ALUM & CGB YA6 BLK
Installation Instructions For Yamaha Drive Cargo Box**



CAUTION: DO NOT TRANSPORT PASSENGERS IN CARGO BOX.

Kit Components:

Item	Description
1	Cargo Box
2	Cargo Box Channel
3	LH & RH Mounting Brackets
4	1" Square Tubing Caps *
5	Tailgate Rubber Latches
6	Tailgate Rubber Bumpers
7	Tailgate Hardware Kit
8	Hardware Kits

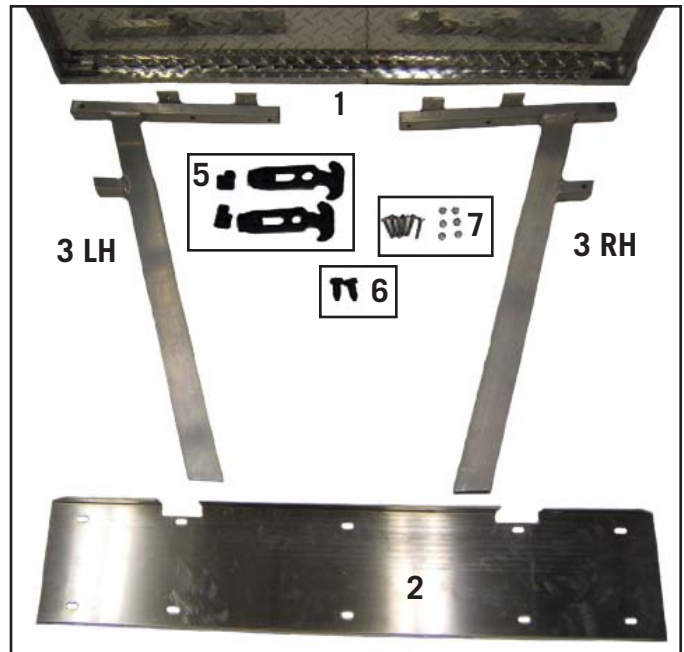

* Item 4 Not Shown

Hardware Kits (Item 8) Contain:

Bottom Channel Hardware Kit

- (6) 5/16"-18 x 1" Carriage Bolts
- (6) 5/16" Washers
- (6) 5/16" Nyloc Nuts

Mounting Bracket Hardware Kit:

- (4) 5/16"-18 x 3" Carriage Bolts
- (4) 5/16" Washers
- (4) 5/16" Nyloc Nuts

Tools Needed:
-(2) 1/2" Wrenches



CAUTION:

Always disconnect the negative (-) cable from the battery pack before beginning. If your cart is equipped with a Tow/Run switch, always switch to the TOW position before disconnecting the battery pack. Make sure you wear eye protection!

INSTALLATION INSTRUCTIONS:

1. Remove rear bag rack, Access Panel, Rear Struts, Drain Tubes and Seat back from cart.

NOTE: Retain hardware for future use.

NOTE: Leave hardware loose for easy installation.

2. Bolt Cargo Box Channel (Item 2) onto bottom of the Cargo Box (Item 1) using (6) 5/16"-18 x 1" Carriage Bolts, (6) 5/16" Washers, and (6) 5/16" Nyloc Nuts. (Figure 1)

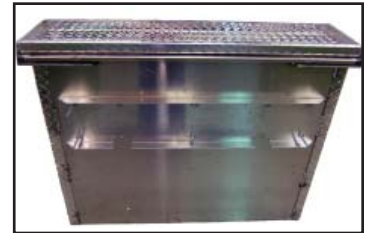


Figure 1

NOTE: Make sure the slots in the Channel face towards the front of the Cargo Box.

3. Bolt Support Brackets (Item 3) onto the Cart by mounting them to the bag rack mounting area using preexisting hardware. (Figure 2)



Figure 2

4. Install (2) 1" Square Tubing Caps (Items 4) on the top opening of the Support Brackets (Items 3).

5. Reinstall Access Panel using preexisting hardware.



Figure 3

6. Mount Rear Struts to the Support Brackets (Item 3) using preexisting hardware. (Figure 3)

7. Mount Rear Seat Back to Support Brackets (Item 3) using existing hardware. (Figure 4)



Figure 4

8. Align Cargo Box (Item 1) with Support Brackets (Item 3) and bolt together using (4) 5/16-18 x 3" Carriage Bolts, (4) 5/16" Washers, and (4) 5/16" Nyloc Nuts. (Figure 5)



Figure 5

9. Locate the Tailgate Rubber Latch (Item 5) and mount with included hardware (Item 7). (Figure 6)



Figure 6

10. Twist Tailgate Rubber Bumpers (Item 6) into place. (Figure 7)



Figure 7

NOTE: Tighten all hardware securely.



Buggies Unlimited
1-888-444-9994
www.buggiesunlimited.com
© Copyright 1997-2008 Buggies Unlimited. All Rights Reserved.