


Woodgrain and Carbon Fiber Dash for Yamaha Drive DSA YA6 CVR WDGR & DSA YA6 CVR CFBR



Before beginning lay out all the parts in an organized manner. Take time to fully read the instructions and be conscience of wearing appropriate eye protection during the install.

Instructions:

- 1) Remove the Allen screw located on the cup holder insert. Gently pry upward on the holder assembly as it will “pop” out of place, but do not use excessive force. Set the assembly aside and retain the screw for later use. (A)
- 2) Remove the six Protector Plate screws located under the Glove box area. Discard the Protector Plates as they will not be used. (B)
- 3) It may be necessary to remove the Steering column cover Plastic rivet to allow for proper dash placement. Once you have proper fit place the cover and rivet back into place. (A)
- 4) Place the new dash onto the dash area and install the cup holder assembly making sure the cup holder slot keepers are in alignment with the dash slots. Also make sure the leading edge of the cup holder is slid into the support area first and then rotate downward into place. Install the Allen screw and as you tighten the screw make sure no binding occurs on the cup holder assembly. (A)
- 5) Push the dash assembly inward at the bottom firmly and drill a 1/8” hole at the bottom of the assembly. The holes in the new dash are pre-drilled so marking can be done easily. The use of a 6 to 8” long bit will allow drilling to be done without the use of a 90 degree angled drill. (C)

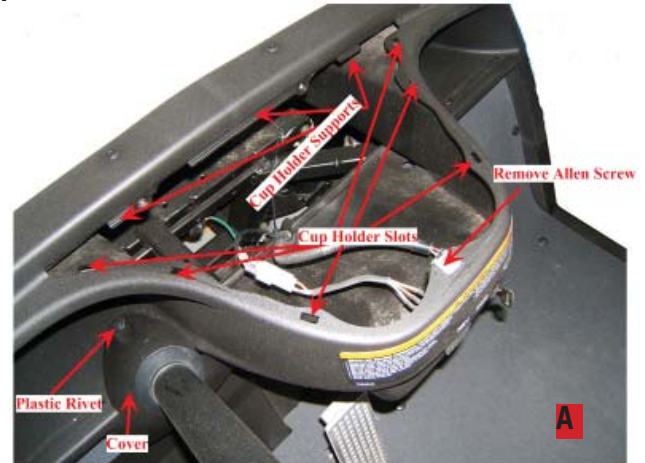

Buggies Unlimited
1-888-444-9994
www.buggiesunlimited.com
Copyright © 1997~2008 Buggies Unlimited
All Rights Reserved