

# M&M VEHICLE CORP.



## (STD) REAR LEG TOP SUPPORTS

### Part# PC275RLG22 & PC275RLG22B


## YAMAHA G-22

### INSTALLATION INSTRUCTIONS

1. INSTALL TOP TO REAR SUPPORT LEGS. SECURE AT (LOCATION A) WITH FACTORY BOLTS THAT WERE SAVED WHILE REMOVING THE TOP.

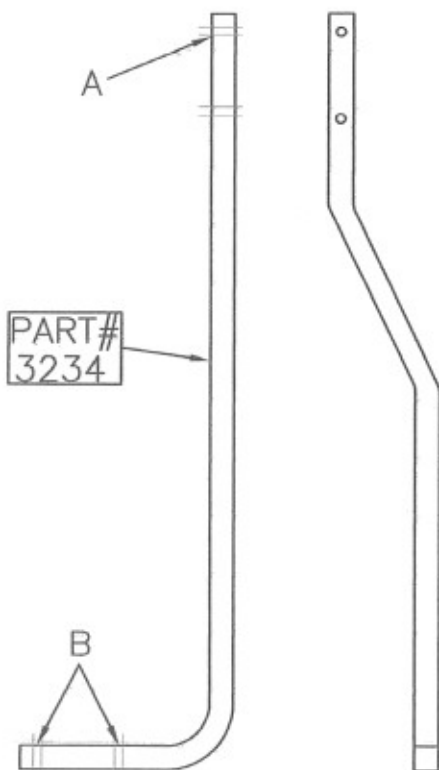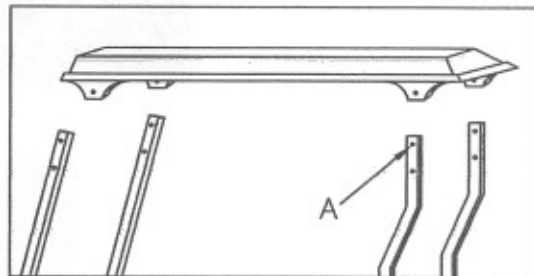

2. INSTALL BOTTOM OF TOP SUPPORTS TO SEAT BACK CROSSBAR, (NOTE: THE BOTTOM OF THE REAR LEGS TURN OUT) YOU MUST DRILL (4)  $1\frac{1}{32}$ " HOLES AT LOCATION B, SECURE WITH (4)  $\frac{5}{16}$ " x  $2\frac{1}{2}$ " HEX HEAD BOLTS, (8)  $\frac{5}{16}$ " FLATWASHERS, (4)  $\frac{5}{16}$ " LOCKNUTS.

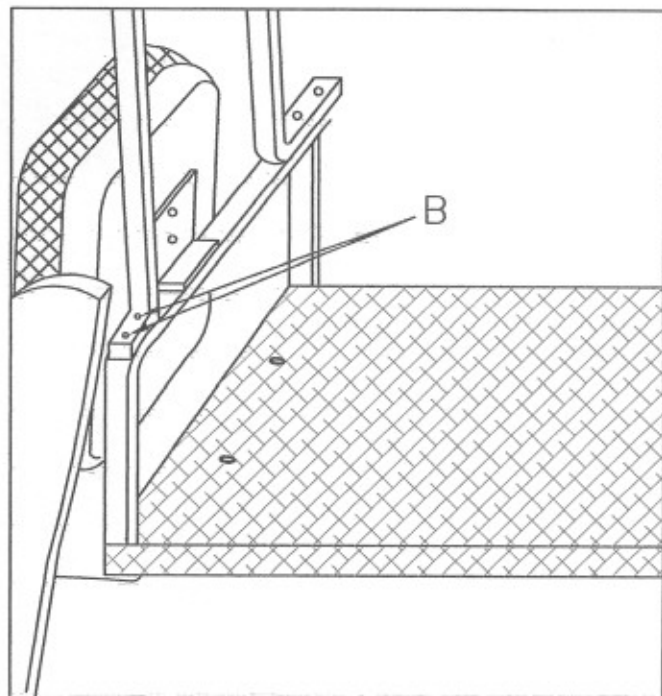

### BOLT KIT

- 4-  $\frac{5}{16}$ " x  $2\frac{1}{2}$ " HEX HEAD BOLTS
- 8-  $\frac{5}{16}$ " FLATWASHERS
- 4-  $\frac{5}{16}$ " LOCKNUTS

### M & M VEHICLE CORP.

19873 Hwy 22 W. Mexico MO 65265  
573-581-4914

TITLE:

G-22 REAR LEG SUPPORTS  
INSTALLATION INSTRUCTIONS

#### NOTICE

THE INFORMATION CONTAINED HEREIN IS THE PROPERTY OF M & M VEHICLE CORP. AND IT SHALL NOT BE COPIED NOR USED IN ANY MANNER EXCEPT AS EXPRESSLY AUTHORIZED.

DRAWN BY:

RANDY HAERER

DATE:

MAY 01, 2007

DWG NO.

# 833-3

SHEET:

1 of 1

SCALE:

Not To Scale