

LESTER CHARGER 48-Volt Dead Battery Pre-Charge for Club Car




If your electric golf cart has been idle for a long period of time without a charge, and then you go to charge it and nothing happens, it's probably not your charger. Your batteries have deep cycled and need to be **pre-charged**.

First make sure to turn off A.C. to the charger and unplug the charger from the cart. Take the cover off the charger. Unhook wire #3 from the breaker, move it away, and tape the end. Unhook wire #4 and plug it in where wire #3 was (as shown by dotted line below).

Now, plug the charger into the cart. Then plug the A.C. cord into the wall. Charge for 30 minutes to 1 hour. Put everything back like it was. The unit should now charge the cart correctly.

NOTE: Unplug from the wall first and then from the cart.

IMPORTANT! Follow these procedures step by step!

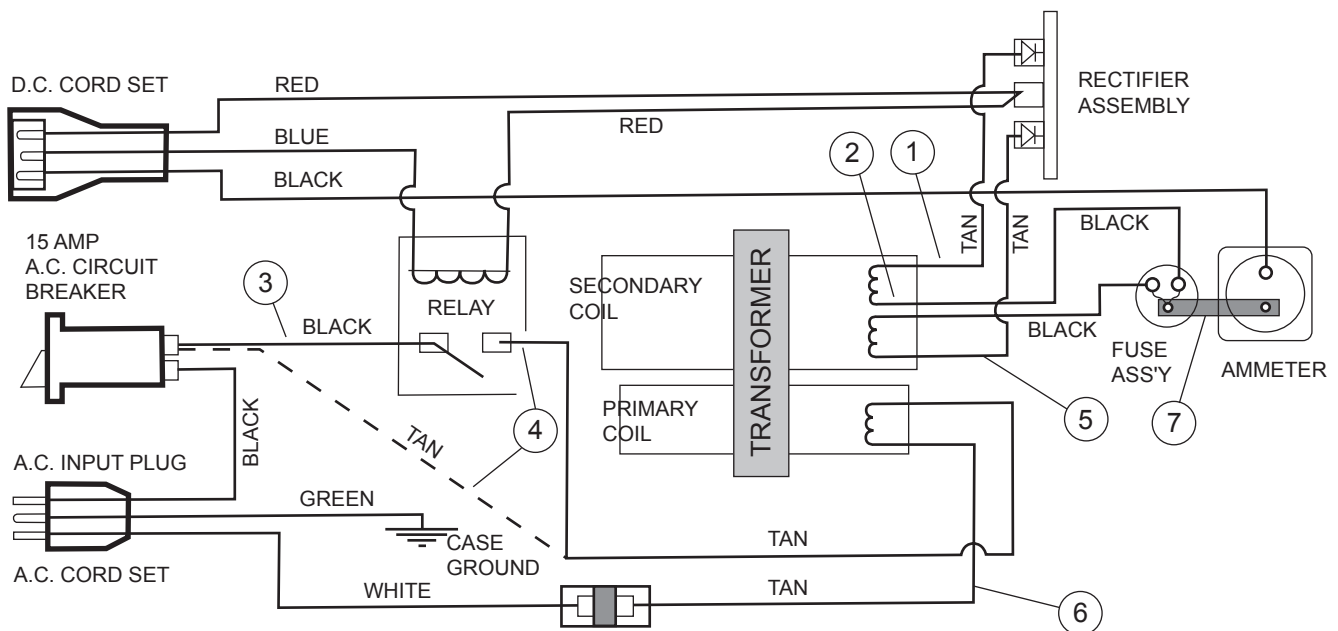

Buggies Unlimited
1-888-444-9994
www.buggiesunlimited.com